



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	870998	1	Starter motor		24V REPL BY 847308
	847308	1	Starter motor COMPONENTS NOT SPEC.	030-1400	24V
2	953486	3	Stud		
3	955827	3	Nut		
4	942336	3	Spring washer		
5			STARTER COVER WITH INSTALLATION COMPONENTS	030-0900	
6			THERMOSWITCH AND PROTECTING BOX WITH INSTALLATION COMPONENTS	030-0850	
7	354671	1	Tachometer sensor		(837783)
8	925059	1	O-ring		
9	843103	1	Attaching plate		
10	843102	1	Box		
11	956060	4	Screw		
12	941904	4	Spring washer		
13	822327	1	Cable union		
14	880243	1	Nut		
15		1	STOP SOLENOID WITH INSTALLATION COMPONENTS		SEE GROUP 2D
16		1	ALTERNATOR WITH INSTALLATION COMPONENTS		24V 25A
				030-0550	
		1	ALTERNATOR WITH INSTALLATION COMPONENTS		24V 60A
				030-0650	
17	823480	1	Charge regulator		24V 25A. BRÖYT SPEC. 867510.
	823766	1	Charge regulator		24V 60A
				030-1350	
18	899709	3	Vibration damper		24V 25A
19	956091	6	Screw		24V 25A
20	941906	6	Spring washer		24V 25A
21	843124	1	Electrical distribut		
22	843126	1	Cover		
23	837838	1	Shaft		
24	951667	2	Lock ring		
25	940135	3	Screw		
26	941907	3	Spring washer		
27	823575	3	Spacer sleeve		
28	955261	1	Screw		
29	960138	1	Washer		
30	955978	1	Rubber ring		
31	842224	X	Sealing strip		L = 1000 MM
32	843095	1	Terminal block		
33	956074	2	Screw		
34	941905	2	Spring washer		
35	1504951	8	Relay		MO-XXXX/31088
	1504951	6	Relay		MOXXXX/31089-
36	956076	2	Screw		
37	941905	4	Spring washer		
38	955780	4	Nut		
39	956074	2	Screw		
40	843072	1	Cable trunk		MO-XXXX/31088
	844440	1	Cable trunk		MOXXXX/31089-
41	843073	1	Cable trunk		MO-XXXX/31088
	844441	1	Cable trunk		MOXXXX/31089-
42	837722	1	Resistor		
43	88578	3	Fuse box		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
44	943905	2	Fuse, BLUE		25A
	942785	2	Fuse		16A
	942545	2	Fuse		5A MO-XXXX/31088
45	842390	2	Bridge connector		
46	88578	1	Fuse box		
47	842401	2	Diode		
48	956060	X	Screw		
49	941904	X	Spring washer		
50	843249	2	Diode		40A
51	25534	4	Gasket		D = 10 MM
	962658	4	Washer		D = 18 MM
52	837718	1	Race gard		MO-XXXX/31088
52A	843910	1	Race gard		MOXXXX/31089-
53	956061	2	Screw		MO-XXXX/31088
53A	956069	2	Screw		MOXXXX/31089-
54	941904	2	Spring washer		
55	955779	2	Nut		
56	843101	1	Fuse box		
57	239148	5	Fuse		80A
58	956083	2	Screw		
59	955780	2	Nut		
60	941905	2	Spring washer		
61	824205	2	Spacer sleeve		
62	881193	X	Cable union		ELECTRICAL HOUR COUNTER.
	822327	X	Cable union		ELECTRICAL HOUR COUNTER.
	881192	X	Cable union		ELECTRICAL HOUR COUNTER.
63	880755	X	Nut		FOR881193. ELECTRICAL HOUR COUNTER.
	880243	X	Nut		ELECTRICAL HOUR COUNTER.
64	662620	X	Rubber button		D = 28 MM. ELECTRICAL HOUR COUNTER.
65	94081	X	Rubber button		D = 22 MM. ELECTRICAL HOUR COUNTER.
66	956091	3	Screw		ONLY FOR THERMOSWITCH CONTROL 837500,837501.
	956074	2	Screw		SPEC. 867446, 867477, 867618, 867649.
67	941906	3	Spring washer		ONLY FOR THERMOSWITCH CONTROL 837500,837501.
	941905	2	Spring washer		SPEC. 867446, 867477, 867618, 867649.
68	955781	3	Nut		ONLY FOR THERMOSWITCH CONTROL 837500,837501.
	955780	2	Nut		SPEC. 867446, 867477, 867618, 867649.
69	843063	1	Box		
70	843064	1	Cover		
71	958244	4	Screw		
72	955795	1	Nut		
73	955894	3	Washer		
74	833244	1	Spacer sleeve		
75	955514	2	Screw		
76	955893	2	Washer		
77	837782	3	Pressure sensor		
78	957181	3	Gasket		
79	843232	1	Oil pressure sensor		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
80	843813	2	Switch		ALARM
81	837928	1	Valve		
82	837930	1			
83	925052	2	· Rubber ring		
84	951938	1	· Spring pin		
85	837932	1	· Intermediate section		
86	70472	1	· Ball		
87	832441	1	· Spring		
88	837929	1			
89	955985	1	· O-ring		
90	837938	1	Intermediate section		
91	955984	1	Sealing ring		
92	959181	4	Screw		
93	941904	4	Spring washer		
94	942001	4	Screw		
95	941906	4	Spring washer		
96	843240	1	Tube, OIL PRESSURE		
98	843241	1	Tube		
100	940374	1	Clamp		
101	42768	1	Nipple		
102	180068	1	Nipple		
103	954342	4	Elbow union		
104	954306	X	Copper tube		L = 300 MM
105	954322	4	Cap nut		
106	954306	X	Copper tube		L = 400 MM
107	954343	4	Elbow nipple		
108	836192	1	Nipple		
109	881193	1	Cable union		
110	880755	1	Nut		
111	843221	1	Bracket		
112	940100	2	Screw		
113	955893	2	Washer		
114	955825	2	Nut		
115	941906	4	Spring washer		
116	804123	1	Tachometer sensor		MO-XXXX/31088
117	241608	1	Protective sleeve		MO-XXXX/31088
118	18986	1	Clamp		MO-XXXX/31088
119	950047	1	Screw		MO-XXXX/31088
120	941906	2	Spring washer		MO-XXXX/31088
121	955825	1	Nut		MO-XXXX/31088
122	952627	1	Clamp		
123	956065	1	Screw		
124	955779	1	Nut		
125	941904	1	Spring washer		
126	843077	1	Instrument panel		
				030-1800	
	843079	1	Instrument panel		MASKINRUM-MACHINE ROOM
				030-1800	
127	843078	1	Instrument panel		
				030-1700	
128	1504951	1	Relay		
129	842950	1	Temperature sensor, EXHAUST TEMP.		
130			CABLE HOLDERS		
131	950158	2	Screw		L = 19 MM
	950160	1	Screw		L = 25 MM

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
132		X	CABLES		CAN'T BE USED ON ALTERNATOR 841765.
133	843197	1	Retainer		24V 60A
134	925063	1	O-ring		24V 60A
135	826957	1			24V 60A
136	955269	1	Screw		24V 60A
137	941906	1	Spring washer		24V 60A
138	881193	1	Cable union		24V 60A
139	843091	1	Intermediate sleeve		24V 60A
140	842987	1	Voltage sensor		
141	843307	1	Alarm panel		ALARM
	846696	1	Alarm panel	030-1750	ALARM. SPECIAL PRODUCTION FOR EXCAVATOR TYPE" HYMAC".
				030-1775	
142	823214	1	Bell		
143	844480	1	Retainer		MOXXXX/31089-
144	844439	1			MOXXXX/31089-
147	845833	1	Box		SIDE MOUNTING.
148	956164	4			SIDE MOUNTING.
149	941904	4	Spring washer		SIDE MOUNTING.
150	955779	4	Nut		SIDE MOUNTING.
151	845963	1			SIDE MOUNTING.
152	955244	2	Screw		SIDE MOUNTING.
153	940090	2	Washer		SIDE MOUNTING.
154	946577	2	Lock nut		SIDE MOUNTING.