



REF	PART NO.	QTY	DESCRIPTION	NOTES
1		1		
		1	• housing	
2		4	• pole shoe	
3	(956130)	4	• Cross recessed screw	Obsolete part
4	(243424)	1	• Field winding	Obsolete part
5	(243425)	1	• Field winding	Obsolete part
6	(243426)	1	• Local part	Obsolete part
7	(243427)	1	• Bearing shield	Obsolete part
8	(76603)	1	• • Bushing	Obsolete part
9	(243428)	1	• Bearing	Obsolete part
10	(72483)	1	• • Bushing	Obsolete part
11	(243429)	1	• Washer	Obsolete part
12	(243430)	1	• Arm	Obsolete part
13	(72481)	1	• Arm	Obsolete part
14	(120649)	X	• Adjusting washer	TH=0.1mm, Obsolete part
	(238834)	X	• Adjusting washer	TH=0.3mm, Obsolete part
15	941906	1	• Spring washer	
16	955781	1	• Hexagon nut	
17	(243431)	1	• Starter pinion	Obsolete part
18	(243436)	2	• • Bushing	Obsolete part
19	(243432)	1	• Rotor	Obsolete part
20		1	•	
21	(240332)	1	• Ring	Obsolete part
22	(240333)	1	• Lock ring	Obsolete part
23	(240610)	X	• Adjusting washer	TH=0.2mm, Obsolete part
	(120657)	X	• Adjusting washer	TH=0.3mm, Obsolete part
	(243433)	X	• Washer	TH=1.0mm, Obsolete part
24	(243434)	1	• Bearing	Obsolete part
25	(243437)	1	• • Bushing	Obsolete part
26	(233679)	1	• • Brush set	Obsolete part
27	(76601)	4	• • Spring	Obsolete part
28	956059	2	• • Cross recessed screw	
29	(955917)	2	• • Spring washer	Obsolete part
30	(120648)	1	• • Washer	Obsolete part
31	(76604)	2	• • Brake shoe	Obsolete part
32	(239547)	2	• • Bushing	Obsolete part
33	(76605)	2	• • Spring	Obsolete part
34	956059	2	• Cross recessed screw	
35	(233872)	1	• Link	Obsolete part
36		2	•	
37	(86287)	2	• Washer	Obsolete part
38	941906	2	• Spring washer	
39	(241326)	1	• Cover	Obsolete part
40	(241327)	1	• Gasket	Obsolete part
41	(956073)	2	• Cross recessed screw	Obsolete part
42	(243435)	1	• Relay	Obsolete part
43	956094	2	• Cross recessed screw	
44	941906	2	• Spring washer	
45	941907	2	• Spring washer	
46	955782	2	• Hexagon nut	