



7522

## MS3B

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	852102	1	Reversing gear		RATIO,1,93:1. REPLACED BY REVERSE GEAR MS3C-852502, ADEPTER-852611 AND 4 SCREWS-955699.
2	851673	1	• Gear housing		
3	832667	1	• Gear housing cover		(832668)
4	956585	3	• Screw		
5	832669	1	• Gasket	IK	
6	814643	1	• Hollow screw		
7	955989	1	• O-ring	IK	
8	943866	X	• Adjusting washer		TH = 0,1 MM
	943867	X	• Adjusting washer		TH = 0,2 MM
	943868	X	• Adjusting washer		TH = 0,4 MM
9	853542	2	• Ball bearing		(183729)
10	839027	1	• Drive gear set		
11	897312	2	• Lock ring		
12	850422	1	• Spacer ring		
13	852433	1	• Wear washer		(850243)
14	181359	4	• Needle bearing		
15	897308	2	• Spacer ring		
16	897385	1	• Shaft		
17	951077	1	• Lock ring		
18	26411	1	• Spacer		
19	813970	1	• Spring		
20	852949	1	• Sliding sleeve		(852548)
21	850433	1	• Lock ring		
22	949071	X	• Adjusting washer		TH = 0,1 MM
	949072	X	• Adjusting washer		TH = 0,15 MM
	949073	X	• Adjusting washer		TH = 0,50 MM
	949074	X	• Adjusting washer		TH = 0,50 MM
23	832644	1	• Bearing sleeve		
24	946179	X	• Adjusting washer		TH = 0,1 MM
	943870	X	• Adjusting washer		TH = 0,2 MM
25		1	• NUT		
	839332	X	• • Nut		ALT TH = 2,10 MM
	839333	X	• • Nut		ALT TH = 2,37 MM
	839334	X	• • Nut		ALT TH = 2,65 MM
26	181301	1	• Cone		
26A	181302	1	• Cup		
27	851715	1	• Drive gear set		
28	181303	1	• Roller bearing		
29	181304	1	• Cup		
30	941835	X	• Adjusting washer		TH = 0,05 MM
	87655	X	• Adjusting washer		TH = 0,1 MM
	191840	X	• Adjusting washer		TH = 0,15 MM
	87654	X	• Spacer		TH = 0,35 MM
31	851697	1	• Bearing cover		
31A	925257	1	• O-ring		
32	946329	4	• Flange screw		
33	957173	1	• Gasket	IK	
34	960628	1	• Plug		
35	875425	1	• Bearing box		
36	951940	1	• • Tensioning din		
37	183247	1	• • Bearing		
38	183668	1	• • Roller bearing		
39	897772	1	• • Oil deflector		
40	925256	1	• O-ring	IK	
41	941826	X	• Adjusting washer		TH = 0,05 MM
	941827	X	• Adjusting washer		TH = 0,2 MM
	948230	X	• Shim		TH = 0,35 MM
42	839253	1	• Sealing ring	IK	
43	914538	1	• Lock ring		

## MS3B

REF	PART NO.	QTY	DESCRIPTION		SEE SEC.	NOTES
44	832675	1	• Washer			
45	956000	1	• O-ring	IK		
46	943871	X	• Shim			TH = 0,05 MM
	943872	X	• Shim			TH = 0,1 MM
	943873	X	• Shim			TH = 0,2 MM
47	839013	1	• Washer			
48	851293	1	• Screw			
49	850275	1	• Axle shaft			
50	850276	1	• Intermediate section			
50A	925257	1	• O-ring			
51	965185	6	• Flange screw			
52	925267	1	• O-ring	IK		
53	851496	X	• Adjusting washer			TH = 0,1 MM
	851495	X	• Adjusting washer			TH = 0,15 MM
	851494	X	• Adjusting washer			TH = 0,35 MM
54	183668	1	• Roller bearing			
54A	851699	1	• Spacer ring			
54B	852184	X	• Shim			TH = 0,05 MM
	84219	X	• Adjusting washer			TH = 0,1 MM
	84218	X	• Spacer			TH = 0,35 MM
54C	183328	1	• Cup			
54D	183327	1	• Cone			
55	851678	1	• Bearing housing			
56	946671	6	• Flange screw			
57	944530	1	• Ring			
58	851679	1	• Spacer ring			
59	853757	1	• Sealing ring			(959026)
60	925063	1	• O-ring			
61	852072	1	• Slip clutch			
62	925069	1	• • O-ring			
62A	925092	1	• • O-ring			
62B	925263	2	• • O-ring			
62C	955299	8	• • Screw			
63	850471	1	• Washer			
64	947855	1	• Lock nut			
65	839504	1	• Shift mechanism			
66	839505	1	• • Bearing housing			
67	897816	1	• • Eccentric piston			
			• • Bulletin P-44-1-7	P-44-1-7-EN		Shift mechanism, eccentric piston
68	814603	1	• • Dog			
69	814184	1	• • Spring			
70	897711	1	• • Screw			
71	897871	X	• • Adjusting washer			TH = 0,2 MM
72	958838	1	• • Sealing ring	IK		
73	951924	1	• • Tensioning din	IK		
74	942871	1	• • Pin			
75	925093	1	• • O-ring	IK		
76	955273	4	• Screw			
77	941906	8	• Spring washer			
77A	942000	2	• Screw			
78	850350	1	• Cable attachment			
79	819068	1	• Washer			
80	819067	1	• Brace			
81	946577	2	• Lock nut			
81A	940090	2	• Washer			
82	955246	2	• Screw			
83	852363	1	• Lever			(834021)
84	955781	2	• Nut			
85	955948	2	• Lock washer			
86	955270	2	• Screw			
87	804312	1	• Cube			
88	955892	1	• Washer			
89	907834	1	• Cotter pin			(17276)

MS3B

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
90	851786	2	• Oil cooler		
91	852007	1	Connection pipe		
92	851730	1	Connection pipe		
92B	959207	4	Screw		
93	960169	4	• O-ring	IK	
94	959207	4	• Screw		
95	804107	2	• Zinc electrode		FOR 800475
	838929	2	• Zinc anod		FOR 838928
96	800475	2	• Plug		REPLACED BY PLUG-838928 AND ELECTRODE-838929
	838928	2	• Plug		
97	839351	1	• Oil dipstick		
98	897682	1	• Gasket		
99	955974	1	• O-ring		
100	814179	1	• Plug		
	875628	1	Gasket kit		SEE GROUP 10A