

AQD70B

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|-----------------------|----------|--------------|
| 1 | 832424 | 1 | Intermediate section | | |
| 2 | | 1 | • BEARING HOUSING | | |
| 3 | 832426 | 1 | • Shaft | | |
| 4 | 914472 | 1 | • Lock ring | | |
| 5 | 181644 | 2 | • Ball bearing | | |
| 6 | 832427 | 1 | • Spacer sleeve | | |
| 7 | 832428 | 1 | • Washer | | |
| 8 | 382990 | 1 | • Companion flange | | |
| 9 | 946571 | 1 | • Ring | | |
| 10 | 943805 | 1 | • Nut | | |
| 11 | 120746 | X | • Adjusting washer | | TH = 0,1 MM |
| | 120747 | X | • Adjusting washer | | TH = 0,35 MM |
| | 192084 | X | • Adjusting washer | | TH = 0,50 MM |
| 12 | 804262 | 1 | • Plug | | |
| 13 | 81383 | X | • Spacer | | TH = 0,1 MM |
| | 81384 | X | • Spacer | | TH = 0,15 MM |
| 14 | | 1 | UNIVERSAL JOINT SHAFT | | |
| | | | | 04A-0850 | |
| 15 | 837314 | 1 | Flange | 04A-0550 | |
| 16 | 940128 | 16 | Screw | | |
| 17 | 942336 | 16 | Spring washer | | |
| 18 | 955848 | 16 | Nut | | |
| 19 | 839346 | 2 | | | |
| 20 | 839347 | 2 | | | |
| 21 | 955317 | 8 | Screw | | |
| 22 | 941908 | 8 | Spring washer | | |
| 23 | 955783 | 8 | Nut | | |
| 24 | 832256 | 1 | Clamping ring | 04A-0900 | |