



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	240501	1			REPL BY 843511
				030-1400	
	842775	1			REPL BY 843511
				030-1400	
	842774	1	Starter motor		REPL BY 843510
				030-1400	
	843511	1	Starter motor		REPL BY 847306
				030-1450	
	843510	1	Starter motor		REPL BY 847307
				030-1450	
	847306	1	Starter motor		12V LATER PROD
				030-1515	
	847307	1	Starter motor		24V LATER PROD
				030-1525	
	880906	1	Starter motor		32V
				030-1500	
2	953486	3	Stud		
3	955827	3	Nut		
4	942336	3	Spring washer		
5		1	ALTERNATOR AND INSTALLATION COMPONENTS		12V38A,24V25A
				030-0800	
5		1	ALTERNATOR AND INSTALLATION COMPONENTS		24V60A,32V60A
				030-1000	
6		1	CHARGING RELAY AND INSTALLATION COMPONENTS		12V38A,24V25A
				030-0800	
6	823766	1	Charge regulator		24V60A
				030-1350	
	823851	1	Charge regulator		32V60A
				030-1350	
7	824483	1	Cable trunk		24V60A,32V60A
7	824485	1	Cable trunk		12V38A,24V25A
8	942558	2	Terminal block		12V38A,24V25A
9	948210	X	Strip clamp		
10		X	CABLES AND TERMINALS CABLE HOLDERS	030-1950	
11		1			
12	950144	2	Screw		
13	120265	2	Washer		
14		1	BRACKET		SEE GROUP 2B
15	950004	4	Screw		
16	824384	1	Protecting casing		12V38A,24V25A
17	950053	3	Screw		
18	941906	3	Spring washer		
19	823616	1	Clutch housing		
20	824337	1	Bracket		
21	940135	3	Screw		
22	941907	3	Spring washer		
23	955524	4	Screw		
24	941907	4	Spring washer		
25	823767	4	Terminal block		24V60A,32V60A
26	950011	4	Screw		
27	950059	1	Screw		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
28	955826	1	Nut		
29	941907	1	Spring washer		
30	823617	1	Cover		
31	950047	4	Screw		
32	881432	1	Pressure sensor		
33	827150	1	Temperature sensor		
34	1507899	1	Tachometer sensor		
35	823363	1	Instrument panel		
				030-1550	
	823364	1	Instrument panel		24V. TAMD70B, AQD70B MO-XXXX/4766.
				030-1550	
	823365	1	Instrument panel		32V. TAMD70B, AQD70B MO-XXXX/4766.
				030-1550	
	837365	1	Instrument panel		12V. TAMD70B, AQD70B MOXXXX/4767-.
				030-1800	
	837366	1	Instrument panel		24V. TAMD70B, AQD70B MOXXXX/4767-.
				030-1800	
36	837308	1	Flange		SEE GROUP 2B. TAMD70B, AQD70B MOXXXX/4767-.
37	842076	1	Glow plug		12V SEE GROUP 2C. TAMD70B, AQD70B MOXXXX/4767-.
	837330	1	Glow plug		24V SEE GROUP 2C. TAMD70B, AQD70B MOXXXX/4767-.
38	837327	1	Solenoid valve		12V SEE GROUP 2C. TAMD70B, AQD70B MOXXXX/4767-.
	837328	1	Solenoid valve		24V SEE GROUP 2C. TAMD70B, AQD70B MOXXXX/4767-.
38A	837367	1			TAMD70B, AQD70B MOXXXX/4767-.
39	837333	1	Bracket		TAMD70B, AQD70B MOXXXX/4767-.
40	956090	2	Screw		TAMD70B, AQD70B MOXXXX/4767-.
41	941906	2	Spring washer		TAMD70B, AQD70B MOXXXX/4767-.
42	837337	1	Bracket		TAMD70B, AQD70B MOXXXX/4767-.
43	940135	3	Screw		L = 22 MM. TAMD70B, AQD70B MOXXXX/4767-.
	956571	2	Screw		L = 32 MM. TAMD70B, AQD70B MOXXXX/4767-.
44	941907	5	Spring washer		TAMD70B, AQD70B MOXXXX/4767-.
45	960141	2	Washer		TAMD70B, AQD70B MOXXXX/4767-.
46	837372	2	Spacer sleeve		TAMD70B, AQD70B MOXXXX/4767-.
47	837369	2	Bushing		TAMD70B, AQD70B MOXXXX/4767-.
48	837335	1	Clutch housing		TAMD70B, AQD70B MOXXXX/4767-.
49	823617	1	Cover		TAMD70B, AQD70B MOXXXX/4767-.
50	950047	4	Screw		TAMD70B, AQD70B MOXXXX/4767-.
51	941906	6	Spring washer		TAMD70B, AQD70B MOXXXX/4767-.
52	844486	1	Timer relay		12V. TAMD70B, AQD70B MOXXXX/4767-.
	837344	1	Resistor		24V. TAMD70B, AQD70B MOXXXX/4767-.
53	950044	2	Screw		TAMD70B, AQD70B MOXXXX/4767-.
54	870670	3	Relay		12V. TAMD70B, AQD70B MOXXXX/4767-.
	870451	3	Relay		24V. TAMD70B, AQD70B MOXXXX/4767-.
55	950008	4	Screw		TAMD70B, AQD70B MOXXXX/4767-.
56	942558	1	Terminal block		TAMD70B, AQD70B MOXXXX/4767-.
57	88578	1	Fuse box		TAMD70B, AQD70B MOXXXX/4767-.
58	943905	2	Fuse		TAMD70B, AQD70B MOXXXX/4767-.
59	950011	4	Screw		TAMD70B, AQD70B MOXXXX/4767-.
60	823759	2	Cable grommet		TAMD70B, AQD70B MOXXXX/4767-.

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
61		1	STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
62		1	HOUR INDICATING DEVICE		SEE GROUP 9
63		1	ALARM DEVICE FOR PRESSURE AND TEMP.		SEE GROUP 9
64	942651	1	Clamp		
65	950059	1	Screw		
66		1	PLATE		EARLY TYPE