



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	ALTERNATOR AND INSTALLATION COMPONENTS		24V/25A
				030-0750	
2		1	· THERMOSWITCH AND PROTECTING BOX WITH INSTALLATION COMPONENTS	030-1150	
3		1	STARTER COVER AND INSTALLATION COMPONENTS	030-1200	
4	4803292	1	Charge regulator		24V 25A
4A	845976	1	Cable trunk		
5	899709	3	Vibration damper		
6	956091	3	Screw		
7	941906	3	Spring washer		
8	956092	3	Screw		
9	842774	1	Starter motor		REPL BY 843510
				030-1400	
	843510	1	Starter motor		REPL BY 847307
				030-1450	
	847307	1	Starter motor		24V
				030-1525	
	823412	1	Starter motor		ALT SI MMS SS26/1
			COMPONENTS		
10	953486	3	Stud		
11	942336	3	Spring washer		
12	955827	3	Nut		
13	1507899	1	Tachometer sensor		
14	76614	1	Rubber collar		
15	823486	1	Intermediate section		
16	823487	1	Cover		
17	823490	1	Gasket		
18	823488	1	Stud		
19	950363	2	Nut		
20	881192	1	Cable union		
21	940135	3	Screw		
22	941907	3	Spring washer		
23	16325	3	Plug		
24	180110	1	Elbow nipple		
25	334175	1	Hose		
26	955826	3	Nut		
27	848367	1	Pressure switch		STOP
28	848368	1	Pressure switch		ALARM
29	881432	1	Pressure sensor		
30	836273	1	Tap		
31	837718	1	Race gard		
32	824411	1	Clutch housing		
33	836366	1	Cover		
34	837421	1	Attaching plate		
35	837423	1	Attaching plate		
36	837422	1	Attaching plate		
37	837878	3	Relay		
38	836177	3	Current bar		
39	824159	40	Clamp		
40	824160	5	Clamp		EARLY TYPE
41	824161	1	Bracket		
42	824172	2	Bracket		
43	824173	2	Bracket		
44	842730	X	Sealing strip		L = 1420 MM
45	955284	2	Screw		
46	941905	5	Spring washer		
47	956076	5	Screw		
48	955780	5	Nut		
49	956061	2	Screw		
50	941904	2	Spring washer		
51	955779	2	Nut		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
52	941906	2	Spring washer		
53	662620	2	Rubber button		ALT
54	940133	3	Screw		
55	942336	3	Spring washer		
56	955827	3	Nut		
57	940161	1	Screw		
58	941907	1	Spring washer		
59	820508	1	Spacer sleeve		
60	655545	3	Rubber button		ALT
61	94081	6	Rubber button		
62	881192	5	Cable union		
63	881193	2	Cable union		
64	880243	5	Nut		
65	880755	2	Nut		
66	88578	2	Fuse box		
67	943905	2	Fuse		25A
	942785	2	Fuse		16A
68	956076	4	Screw		
69	941905	4	Spring washer		
70	955780	4	Nut		
71	180002	1	Fitting		
72	821540	2	Spacer sleeve		
73		1	STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
74	335146	X	Tie straps		
75	948210	X	Strip clamp		
76	837619	1	Attaching plate		
77	837620	1	Attaching plate		
78	241608	1	Protective sleeve		
79	952627	2	Clamp		
80	950047	2	Screw		
81	955825	2	Nut		
82			CABLE HOLDERS		
83	955559	1	Screw		
84	940280	1	Spring washer		
85	950144	2	Screw		
86	120265	2	Washer		
87			CABLES		ACC. TO CLASSIFICATION.