



5167

REF	PART NO.	QTY	DESCRIPTION		NOTES
1	471036	1	Bearing housing		
2	424580	1	Sealing ring	IK	
3	422073	1	Shaft		
4	11013	1	Ball bearing		
5	469363	1	Stop ring		
6	469364	1	Gear		
7	421083	1	Stop ring		REPLACED BY 1EA 469363, 1EA 469364.
8			SPACER SLEEVE		
9	181577	1	Ball bearing		
10	423074	1	Washer		
11	940100	6	Screw		
12	421415	3	Lock washer		
13	950586	1	Pin		
14	422329	1	Woodruff key		
15	421079	1	Gear		SEE GROUP 2A
16	102056	3	Screw		
17	467052	1	Lock washer		
18	467055	3	Washer		
19	423123	1	Sealing ring		
20	955525	4	Screw		L = 25 MM
	955527	1	Screw		L = 57 MM
21	941907	5	Spring washer		
22	823474	1	Bearing housing		
23	191776	2	· Bushing		
24	422125	1	Axle shaft		
25	943821	1	Ring	IK	
26	422130	1	Gasket		
27	953224	2	Stud		
28	955825	2	Nut		
29	941906	2	Spring washer		
30	422643	1	Cover		
31	422184	1	Companion flange		
32	421188	1	Intermediate section		
33	422461	1	Companion flange		
34	417512	6	Dog clutch disc		
35	955675	2	Screw		
36	422469	2	Screw		
37	955676	4	Screw		
38	422187	8	Nut		
39	417514	8	Washer		
40	940097	2	Washer		
41	940160	1	Screw		
42	955896	1	Washer		
43	836996	1	Pump coupling guard		
44	955894	1	Washer		
45		1	TACHOMETER SENSOR		SEE GROUP 3.