


COMMON

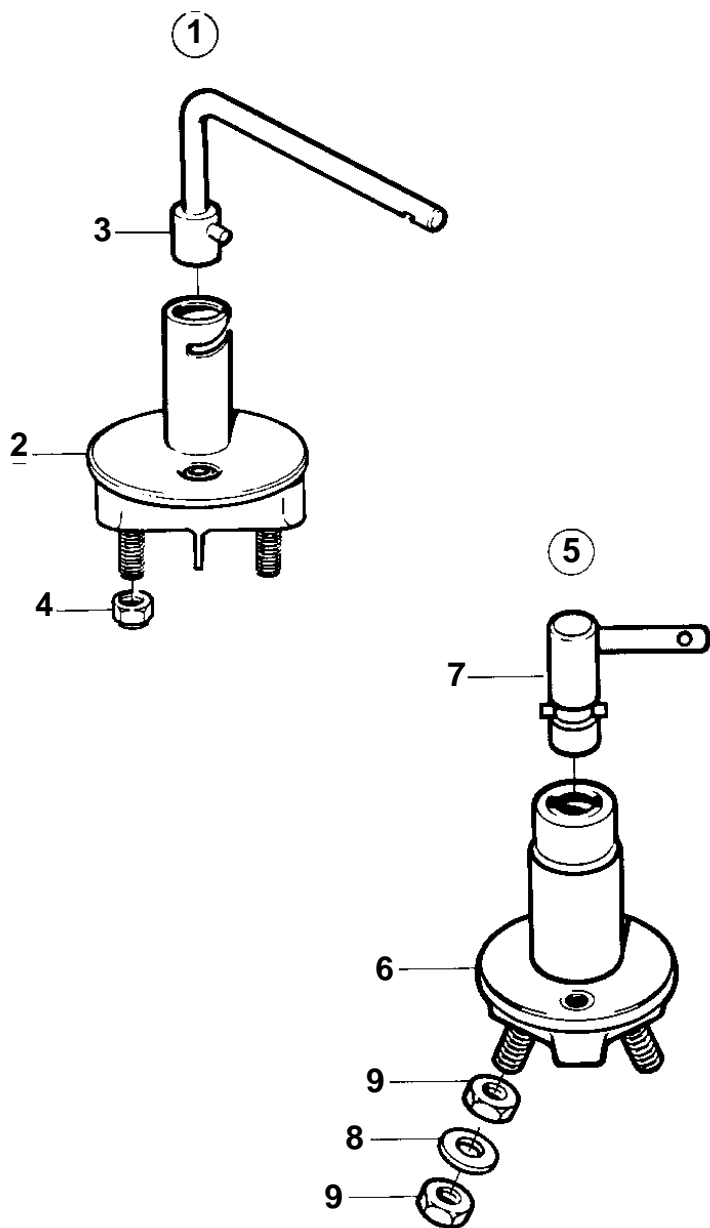

9492

COMMON

| REF | PART NO. | QTY | DESCRIPTION | NOTES |
|-----|----------|-----|---------------------|---------------------|
| 1 | 870980 | 1 | Switch | REPLACED BY 1140319 |
| 2 | | 1 | · Switch | |
| 3 | 243700 | 1 | · Handle | REPLACED BY 1140319 |
| 4 | 971071 | 2 | · Nut | (955783) |
| 5 | 1140319 | 1 | Battery main switch | |
| 6 | | 1 | · Switch | |
| 7 | 1140427 | 1 | · Knob | |
| 8 | 1140428 | 2 | · Washer | |
| 9 | 17602 | 4 | · Nut | |