



6486

REF	PART NO.	QTY	DESCRIPTION	NOTES
1		1	FUEL INJECTION PUMP	SEE GROUP 2C
2	848991	1	Bracket	
3	955269	2	Screw	
4	949607	2	Spring washer	
5	881532	1	Stop solenoid	24V
6	843401	1	Return spring	
7	959219	4	Screw	
8	955894	1	Washer	
9	941907	4	Spring washer	
10	955782	4	Nut	
11	955857	1	Nut	
12	847332	1	Pull rod	L = 70 MM
	849819		Pull rod	L = 85 MM
13	955781	1	Nut	
14	959079	1	Ball joint	
15	949607	1	Spring washer	
16	955781	1	Nut	
17	847189	1	Lever	
18		1	LEVER	SEE GROUP 2C
19	955271	2	Screw	
20	949607	2	Spring washer	
21	955781	2	Nut	
22	955892	1	Washer	
23	847213	1	Attaching plate	
24	955270	3	Screw	
25	949607	3	Spring washer	
26	955781	1	Nut	
27	846654	1	Cube	
28	88333	1	Spring	
29	26694	1	Ball	
30	955964	4	Snap ring	
31	941907	3	Spring washer	
32	846657	1	Control rod	
33	822488	1	Control sleeve	
34	836791	1	Spring	
35	846655	1	Piston	
36	847167	1	Control attachment	
37		1	LEVER	SEE GROUP 2C
38	955270	2	Screw	
39	949607	2	Spring washer	