



8346

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	478285	1	Oil pump		
				02A-1300	
2	955538	4	Screw		
3	190529	2	Lock washer		
4	847288	1	Oil pump screen		
5	470383	6	Sealing ring		
6	955527	2	Screw		
7	941907	2	Spring washer		
8	470918	2	Bracket		
9	847346	1	Bracket		
9A	847347	1	Bracket		
10	942402	8	Flange screw		
11	949786	1	Clamp		
12	942402	1	Flange screw		
12A	941907	1	Spring washer		
12B	945467	1	Nut		
13	847289	1	Tube		
14	847286	1	Flange		
15	470375	1	Pipe		
16	470376	1	Intermediate section		
16A	470263	1	Sealing ring		
17	959794	2	Screw		
18	941907	2	Spring washer		
19	466908	1	Fitting		
20	470377	1	Fitting		
21	956973	1	Ferrule		
22	469465	1	Cover		
23	955912	2	Washer		
24	949607	2	Spring washer		
25	949658	1	O-ring		
26	468727	1	Spring		
27	470291	1	Spring		
28	471085	1	Valve		
29	469468	1	Valve seat		
30	469846	1	Sealing ring		
31	846922	1	Tube		
32	822542	1	Oil dipstick		
33		1	OIL SUMP PUMP AND INSTALLATION COMPONENTS		
				02A-1715	
34	896775	1	Tube		
35	862602	1	Gasket		
36	955525	2	Screw		
37	941907	2	Spring washer		
38	822586	1	Oil pan		
39	470745	1	Gasket		
40	968216	1	Plug		
41	956570	43	Screw		
42	941907	43	Spring washer		
43		1	OIL FILTER AND INSTALLATION COMPONENTS		STD
				02A-1701	
		1	OIL FILTER AND INSTALLATION COMPONENTS		CLASS
				02A-1705	
44	822588	1	Hatch		
45	822587	2	Cover		
	822587	1	Cover		WHEN OIL SUPERVISION IS INSTALLED.
46	862595	3	Gasket		
47	955535	30	Screw		
48	942336	30	Spring washer		
49	843503	1	Cover		5
50		1	OIL- AND FUEL SUPERVISION		SEE GROUP 3

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
51	862597	1	Gasket		WHEN OIL SUPERVISION IS INSTALLED.
52	956569	12	Screw		WHEN OIL SUPERVISION IS INSTALLED.
53	11992	12	Gasket		WHEN OIL SUPERVISION IS INSTALLED.
54	844870	1	Oil scavenging pipe		
55	26013	1	Hollow screw		
56	957181	2	Gasket		
57	941950	1	Clamp		
58	807182	1	Spacer sleeve		
59	940161	1	Screw		
60	842235	1	Cap		
61	943471	1	Hose clamp		