



8345

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|---|----------|------------------------------------|
| 1 | 478285 | 1 | Oil pump | | |
| | | | | 02A-1300 | |
| 2 | 955538 | 4 | Screw | | |
| 3 | 190529 | 2 | Lock washer | | |
| 4 | 847288 | 1 | Oil pump screen | | |
| 5 | 470383 | 6 | Sealing ring | | |
| 6 | 955527 | 2 | Screw | | |
| 7 | 941907 | 2 | Spring washer | | |
| 8 | 470918 | 2 | Bracket | | |
| 9 | 847346 | 1 | Bracket | | |
| 9A | 847347 | 1 | Bracket | | |
| 10 | 942402 | 8 | Flange screw | | |
| 11 | 949786 | 1 | Clamp | | |
| 12 | 942402 | 1 | Flange screw | | |
| 12A | 941907 | 1 | Spring washer | | |
| 12B | 945467 | 1 | Nut | | |
| 13 | 847289 | 1 | Tube | | |
| 14 | 847286 | 1 | Flange | | |
| 15 | 470375 | 1 | Pipe | | |
| 16 | 470376 | 1 | Intermediate section | | |
| 16A | 470263 | 1 | Sealing ring | | |
| 17 | 959794 | 2 | Screw | | |
| 18 | 941907 | 2 | Spring washer | | |
| 19 | 466908 | 1 | Fitting | | |
| 20 | 470377 | 1 | Fitting | | |
| 21 | 956973 | 1 | Ferrule | | |
| 22 | 469465 | 1 | Cover | | |
| 23 | 955912 | 2 | Washer | | |
| 24 | 949607 | 2 | Spring washer | | |
| 25 | 949658 | 1 | O-ring | | |
| 26 | 468727 | 1 | Spring | | |
| 27 | 470291 | 1 | Spring | | |
| 28 | 471085 | 1 | Valve | | |
| 29 | 469468 | 1 | Valve seat | | |
| 30 | 469846 | 1 | Sealing ring | | |
| 31 | 846922 | 1 | Tube | | |
| 32 | 822542 | 1 | Oil dipstick | | |
| 33 | | 1 | OIL SUMP PUMP AND INSTALLATION COMPONENTS | | |
| | | | | 02A-1710 | |
| 34 | 896775 | 1 | Tube | | |
| 35 | 862602 | 1 | Gasket | | |
| 36 | 955525 | 2 | Screw | | |
| 37 | 941907 | 2 | Spring washer | | |
| 38 | 822586 | 1 | Oil pan | | |
| 39 | 470745 | 1 | Gasket | | |
| 40 | 968216 | 1 | Plug | | |
| 41 | 956570 | 43 | Screw | | |
| 42 | 941907 | 43 | Spring washer | | |
| | | | | | |
| | | | | | |
| 43 | | 1 | OIL FILTER AND INSTALLATION COMPONENTS | | |
| | | | | 02A-1693 | |
| | | 1 | OIL FILTER AND INSTALLATION COMPONENTS | | |
| | | | | 02A-1697 | |
| 44 | 822588 | 1 | Hatch | | |
| 45 | 822587 | 2 | Cover | | |
| | 822587 | 1 | Cover | | WHEN OIL SUPERVISION IS INSTALLED. |
| 46 | 862595 | 3 | Gasket | | |
| 47 | 955535 | 30 | Screw | | |
| 48 | 942336 | 30 | Spring washer | | |

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|---------------------------|----------|------------------------------------|
| 49 | 843503 | 1 | Cover | | 5 |
| 50 | | 1 | OIL- AND FUEL SUPERVISION | | SEE GROUP 3 |
| 51 | 862597 | 1 | Gasket | | WHEN OIL SUPERVISION IS INSTALLED. |
| 52 | 956569 | 12 | Screw | | WHEN OIL SUPERVISION IS INSTALLED. |
| 53 | 11992 | 12 | Gasket | | WHEN OIL SUPERVISION IS INSTALLED. |
| | | | | | |