



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	847532	1	Injection pump		
2	848273	1	· Regulator		
				02C-0635	
3	244391	1	· Feed pump		
				02C-0650	
4	863370	1	· Gasket	IK	
5	130673	3	· Stud		
6	941906	3	· Spring washer	IK	
7	940197	3	· Nut		
8		1	· HOUSING		
9	844988	1	· · Plug		
10	240016	1	· Protecting casing		
11	240017	1	· Gasket		
12	240121	1	· Plug		
13	240812	1	· Cover		
14	240037	1	· Gasket		
15	240811	1	· Sealing ring		
16	6638096	4	· Screw		
17	6642955	1	· Screw		
18	947620	1	· Gasket		
19	240907	1	· Control rod		
20	240014	2	· Guide sleeve		
21	244699	1	· Bushing		
22	244008	1	· Lock pin		
23	243263	1	· Plug		
24	240017	1	· Gasket	IK	
25	180707	6	· Plug		
26	18836	6	· Gasket	IK	
27	240023	1	· Roller bearing		
28	240032	1	· Ring		
29	240033	X	· Adjusting washer		TH = 1.20 MM
	240034	X	· Adjusting washer		TH = 1.50 MM
	240035	X	· Adjusting washer		TH = 1.80 MM
	240036	X	· Adjusting washer		TH = 2.00 MM
30	845454	1	· Camshaft		
31	244406	1	· Bearing		
32	240427	2	· Screw		
33	941906	2	· Spring washer	IK	
34	35168	1	· Key	IK	
35	240023	1	· Roller bearing		
36	864299	1	· Sealing ring	IK	
37	240024	X	· Adjusting washer		TH = 0.10 MM
	240025	X	· Adjusting washer		TH = 0.12 MM
	240026	X	· Adjusting washer		TH = 0.14 MM
	240027	X	· Adjusting washer		TH = 0.16 MM
	240028	X	· Adjusting washer		TH = 0.18 MM
	240029	X	· Adjusting washer		TH = 0.30 MM
	240030	X	· Adjusting washer		TH = 0.50 MM
38	243299	1	· O-ring	IK	
39	240021	1	· Cover		
40	845239	4	· Screw		
41	941906	4	· Spring washer	IK	
42	955806	1	· Nut		
43	955927	1	· Spring washer	IK	
44	240947	1	· Cover		
45	1698192	1	· Gasket	IK	
46	244732	12	· Screw		
47	244404	6	· Push rod		
48	238379	6	· · Plate		
49	846577	6	· · Bearing		
50	240780	6	· · Bushing		
51	240779	6	· · Bolt		
52	244685	6	· Spring disc		
53	244731	6	· Spring		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
54	239984	6	· Spring disc		
55	240782	6	· Control sleeve		
56	848299	6	· Lock ring	IK	
57	239991	6	· Cover		
58	241677	6	· Washer	IK	
59	846937	6	· O-ring		
60	844990	X	· Adjusting washer		TH = 0.40 MM
	847428	X	· Adjusting washer		TH = 0.45 MM
	844991	X	· Adjusting washer		TH = 0.50 MM
	847429	X	· Adjusting washer		TH = 0.60 MM
	844992	X	· Adjusting washer		TH = 0.70 MM
	844993	X	· Adjusting washer		TH = 0.80 MM
	847430	X	· Adjusting washer		TH = 0.85 MM
	845238	X	· Adjusting washer		TH = 0.90 MM
	844994	X	· Adjusting washer		TH = 1.00 MM
	844995	X	· Adjusting washer		TH = 1.10 MM
	244633	X	· Adjusting washer		TH = 1.20 MM
	844996	X	· Adjusting washer		TH = 1.25 MM
	244634	X	· Adjusting washer		TH = 1.30 MM
	847431	X	· Adjusting washer		TH = 1.35 MM
	244635	X	· Adjusting washer		TH = 1.40 MM
	847432	X	· Adjusting washer		TH = 1.45 MM
	244381	X	· Adjusting washer		TH = 1.50 MM
	244382	X	· Adjusting washer		TH = 1.60 MM
	244383	X	· Adjusting washer		TH = 1.70 MM
	244384	X	· Adjusting washer		TH = 1.80 MM
	244385	X	· Adjusting washer		TH = 1.90 MM
	244386	X	· Adjusting washer		TH = 2.00 MM
	847433	X	· Adjusting washer		TH = 2.10 MM
61	244733	6	· Sleeve		
62	240422	12	· O-ring	IK	
63	846576	6	· Pump element		
64	846188	6	· Delivery valve		
65	239993	6	· Gasket	IK	
66	240969	6	· Spring		
67	240972	X	· Washer		TH = 0.2 MM
	240973	X	· Washer		TH = 0.5 MM
68	240971	6	· Plug		
69	240001	6	· Gasket	IK	
70	244636	6	· Delivery valve retai		
71	243743	12	· Washer		
72	244380	12	· Stud		
73	941908	12	· Spring washer		
74	943927	12	· Nut		
75	240011	1	· Cover		
76	956209	2	· Screw		
77	18891	2	· Lock washer		
	845240	1	· Small parts kit		SEE GROUP 10A