



8385

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	849194	1	Injection pump		
	3803765	1	Injection pump, exch		Exchange unit
2	845233	1	• Governor		
				02C-0800	
3	244825	1	• Feed pump		
				02C-0875	
4	863370	1	• Gasket	IK	
5	130673	3	• Stud		
6	941906	3	• Spring washer	IK	
7	940197	3	• Nut		
8		1	• HOUSING		
9	844988	1	• • Plug		
10	862390	1	• Lock screw		
11	239897	1	• Gasket		
12	241647	1	• Setting indicator		
13	956092	2	• Screw		
14	941906	2	• Spring washer		
15	6642955	1	• Screw		
16	947620	1	• Gasket		
17	240014	2	• Guide sleeve		
18	244008	1	• Lock pin		
19	244699	1	• Bushing		
20	244380	12	• Stud		
21	243743	12	• Washer		
22	941908	12	• Spring washer		
23	943927	12	• Nut		
24	180707	6	• Plug		
25	18836	6	• Gasket	IK	
26	243263	1	• Plug		
27	240017	1	• Gasket	IK	
28	1698192	1	• Gasket		
29	240947	1	• Cover		
30	244732	12	• Screw		
31	244406	1	• Bearing		
32	941906	2	• Spring washer		
33	849468	2	• Screw		
34	845454	1	• Camshaft		
35	35168	1	• Key	IK	
36	240023	1	• Roller bearing		
37	864299	1	• Sealing ring	IK	
38	243299	1	• O-ring	IK	
39	240024	X	• Adjusting washer		TH = 0,1 MM
	240025	X	• Adjusting washer		TH = 0,12 MM
	240026	X	• Adjusting washer		TH = 0,14 MM
	240027	X	• Adjusting washer		TH = 0,16 MM
	240028	X	• Adjusting washer		TH = 0,18 MM
	240029	X	• Adjusting washer		TH = 0,30 MM
	240030	X	• Adjusting washer		TH = 0,50 MM
40	240021	1	• Cover		
41	955806	1	• Nut		
42	955927	1	• Spring washer	IK	
43	244823	4	• Screw		
44	941906	4	• Spring washer	IK	
45	240907	1	• Control rod		
46	240023	1	• Roller bearing		
47	240032	1	• Ring		
48	240033	X	• Adjusting washer		TH = 1,20 MM
	240034	X	• Adjusting washer		TH = 1,50 MM
	240035	X	• Adjusting washer		TH = 1,80 MM
	240036	X	• Adjusting washer		TH = 2,00 MM
49	239897	1	• Gasket	IK	
50	35096	1	• Overflow valve		
51	238614	1	• • Peg		
52	845193	1	• • Spring		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
53	25540	1	• • Bushing		
54	244636	6	• Delivery valve retai		
55	240971	6	• Plug		
56	240001	6	• Gasket	IK	
57	240969	6	• Spring		
58	239993	6	• Gasket		
59	846188	6	• Delivery valve		
60	244730	6	• Pump element		
61	240422	12	• O-ring	IK	
62	244733	6	• Sleeve		
63	844990	X	• Adjusting washer		TH = 0,40 MM
	847428	X	• Adjusting washer		TH = 0,45 MM
	844991	X	• Adjusting washer		TH = 0,50 MM
	847429	X	• Adjusting washer		TH = 0,60 MM
	844992	X	• Adjusting washer		TH = 0,70 MM
	244908	X	• Adjusting washer		TH = 0,75 MM
	844993	X	• Adjusting washer		TH = 0,80 MM
	847430	X	• Adjusting washer		TH = 0,85 MM
	845238	X	• Adjusting washer		TH = 0,90 MM
	244909	X	• Adjusting washer		TH = 0,95 MM
	844994	X	• Adjusting washer		TH = 1,00 MM
	244910	X	• Adjusting washer		TH = 1,05 MM
	844995	X	• Adjusting washer		TH = 1,10 MM
	244911	X	• Adjusting washer		TH = 1,15 MM
	244633	X	• Adjusting washer		TH = 1,20 MM
	844996	X	• Adjusting washer		TH = 1,25 MM
	244634	X	• Adjusting washer		TH = 1,30 MM
	847431	X	• Adjusting washer		TH = 1,35 MM
	244635	X	• Adjusting washer		TH = 1,40 MM
	847432	X	• Adjusting washer		TH = 1,45 MM
	244381	X	• Adjusting washer		TH = 1,50 MM
	244912	X	• Adjusting washer		TH = 1,55 MM
	244382	X	• Adjusting washer		TH = 1,60 MM
	244913	X	• Adjusting washer		TH = 1,65 MM
	244383	X	• Adjusting washer		TH = 1,70 MM
	244914	X	• Adjusting washer		TH = 1,75 MM
	244384	X	• Adjusting washer		TH = 1,80 MM
	244385	X	• Adjusting washer		TH = 1,90 MM
	244386	X	• Adjusting washer		TH = 2,00 MM
	847433	X	• Adjusting washer		TH = 2,10 MM
	244915	X	• Adjusting washer		TH = 2,15 MM
	244916	X	• Adjusting washer		TH = 2,20 MM
64	846937	6	• O-ring	IK	
65	241677	6	• Washer		
66	239991	6	• Cover		
67	239990	6	• Lock ring	IK	
68	240782	6	• Control sleeve		
69	239984	6	• Spring disc		
70	244731	6	• Spring		
71	244685	6	• Spring disc		
72	244404	6	• Push rod		
73	238379	6	• • Plate		
74	240779	6	• • Bolt		
75	240780	6	• • Bushing		
76	846577	6	• • Bearing		
	845240	1	• Small parts kit		SEE GROUP 10A