



16222

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	Injection pump		
				2542	
1A	35096	1	Overflow valve		
1B	15304	1	Gasket		
2	478647	1	Bracket		
3		2	Guide sleeve		
4	417588	1	Guide sleeve		
5	955566	4	Screw		
6	940280	4	Spring washer		
7	477173	1	Pressure equalizer		
8	969011	1	Gasket		
9	470514	1	Pressure oil line		
10	947281	2	Gasket		
11	837709	1	Hollow screw		
12	11994	2	Gasket		
13	18666	1	Gasket		
14	48634	1	Hollow screw		
15	422246	1	Pipe		
16	25167	1	Hollow screw		
17	942007	1	Hollow screw		
18	947281	2	Gasket		
19	11998	1	Gasket		
20	942703	1	Gasket		
21	845372	1	Fuel hose		L=300mm, REPL BY 866964
22	849076	1	Fuel hose		L=300mm, REPL BY 866964
	866964	2	Fuel hose		L=710mm
23	25167	1	Hollow screw		
24	969011	2	Gasket		
25	22753	2	Nipple		
26	74033	1	Hollow screw		
27	863916	1	Fuel pipe		
28	25167	4	Hollow screw		
29	969011	8	Gasket		
30	946729	3	Gasket		
31	844543	1	Leak-off pipe		
32	16496	1	Hollow screw		
33	969011	2	Gasket		
34	866164	1	Pipe	2519	Connected together with oil pressure pipe for power take off.
35	940156	4	Screw		
36	190509	4	Washer		
37	848677	1	Lever		
38	941906	1	Spring washer		
39	468848	1	Screw		
40	471172	1	Filter housing		
41	471177	1	Screw		
42	947620	1	Gasket		
43	940162	2	Screw		
44	942336	2	Spring washer		
45	3825133	2	Fuel filter		
46	960630	3	Plug		
47	969011	3	Gasket		
48	968062	3	Plug		
49	822591	1	Tube		
50	404279	2	Clamp		
51	950047	1	Screw		
52	949607	1	Spring washer		
53	955825	1	Nut		