

DESCRIPTION	SEE SEC.	NOTES
Engine Speed Control and Stop: A	19518	TMD41A, TAMD41A
Engine Speed Control and Stop: B	19518B	TMD41A, TAMD41A
Engine Speed Control and Stop: SOLAS	19519	TAMD41A
Engine Speed Control and Stop	19520	TAMD41A
Engine Speed Control and Stop: A	19521	D41A, AQAD41A, AD41A
Engine Speed Control and Stop: B	19521B	D41A, AQAD41A, AD41A
Engine Speed Control and Stop: C	19521C	D41A, AQAD41A, AD41A
Engine Speed Control and Stop: A	19522	TMD41B, D41B, TAMD41B, AD41B
Engine Speed Control and Stop: B	19522B	TMD41B, D41B, TAMD41B, AD41B
Engine Speed Control and Stop: C	19522C	TMD41B, D41B, TAMD41B, AD41B
Engine Speed Control and Stop: D	19522D	TMD41B, D41B, TAMD41B, AD41B