



8949

| REF | PART NO. | QTY | DESCRIPTION | NOTES |
|-----|----------|-----|--------------------------|-----------|
| 1 | 853169 | 1 | Mounting kit | TWIN |
| 2 | 851881 | 1 | · Cover | |
| 3 | 851895 | 2 | · · Decal | |
| 4 | | 1 | · · Crossbar | |
| 5 | 851897 | 1 | · · Decal | |
| 6 | | 1 | · · COVER | |
| 7 | 852347 | 2 | · Hand lever | |
| 8 | 853004 | 2 | · Push button | |
| 9 | 963678 | 2 | · · Hex. socket screw | |
| 10 | 851600 | 2 | · Control | |
| 11 | | 1 | · MOUNTING KIT | |
| 12 | 947671 | 4 | · · Hex. socket screw | |
| 13 | 960138 | 4 | · · Washer | |
| 14 | 955780 | 4 | · · Hexagon nut | |
| 15 | 940090 | 4 | · · Washer | |
| 16 | 839479 | 1 | · Plate | |
| 17 | 853423 | 2 | · Retainer | |
| 18 | 852924 | 2 | · Clip | |
| 19 | 839664 | 2 | Screw | |
| 20 | 839638 | 2 | Cube | |
| 21 | 17253 | 2 | Split pin | |
| 22 | 855352 | 2 | Neutral position con | |
| 23 | | 2 | · Cable kit | |
| 24 | 850200 | 2 | · · Toggle switch | |
| 25 | | X | · · CABLES AND TERMINALS | |
| 26 | 876037 | 2 | · Relay kit | (1501832) |
| 27 | 946177 | 4 | · Cross recessed screw | |
| 28 | 947536 | 4 | · Hexagon nut | |
| 29 | 948210 | X | · Cable tie | |