
3.0GSPMDA

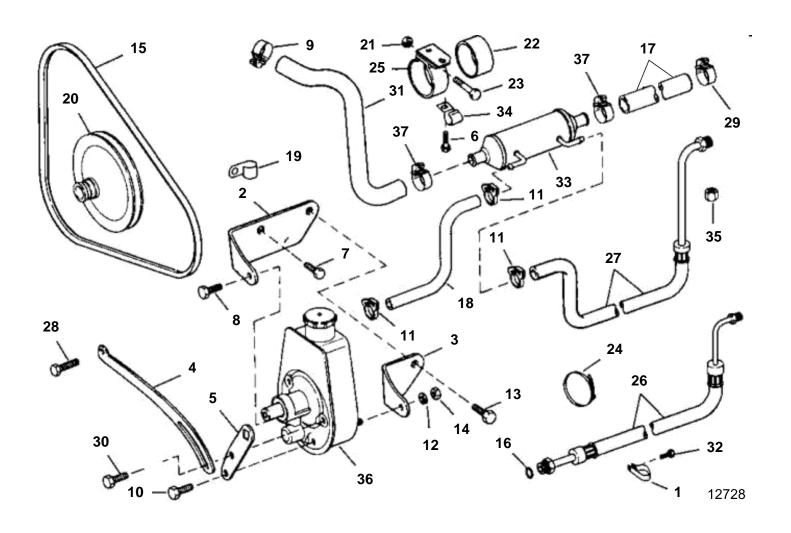

Upd: 2008-10-20

## 3.0GSPMDA

PART NO.  3852837 3852500 3852501 3853328 3853327 3853557 3853557 3853405 3852496 3852496 3852496 3852498 3853331 3852497 3852305 3852574  3853804 3852079 3853236 3852126 3852423 3853809 3853809 3853809	1 1 1 1 1 1 1 1 1 1 1 1	Screw, Clamp, oil cooler to manifold Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	Front
3852500 3852501 3853328 3853327 3853557 3853557 3853405 3850422 3853405 3852196 3852496 3852498 3853266 3852497 3852305 3852574 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1	Bracket, Steering pump to engine, front Bracket, Steering pump to engine, rear Brace, Power steering pump Bracket Screw, Clamp, oil cooler to manifold Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump Nut, Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852501 3853328 3853327 3853557 3853557 3853405 3850422 3853405 3852196 3852496 3852498 3853266 3852497 3852305 3852497 3852305 3852574 3853804 3852079 385326 3852126 3852423 3853809 3853810	1 1 1 1 1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1	Bracket, Steering pump Bracket Screw, Clamp, oil cooler to manifold Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853328 3853327 3853557 3853557 3853405 3850422 3853405 3852196 3852496 3852498 3853331 3852497 3852305 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1	Bracket Screw, Clamp, oil cooler to manifold Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853327 3853557 3853557 3853405 3850422 3853405 3852196 3852496 3852498 3853266 3852497 3852305 3852574 3852574 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 3 1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1	Bracket Screw, Clamp, oil cooler to manifold Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853557 3853557 3853405 3850422 3853405 3852196 3852496 3852498 3853331 3852497 3852305 3852574 3852305 3852574 3852305 3852574 3853804 3852079 3853236 3852126 3852423	1 1 3 1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1	Screw, Clamp, oil cooler to manifold Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853557 3853405 3850422 3853405 3852196 3852496 3853266 3852498 3853331 3852497 3852305 3852574 3852079 3853236 3852126 3852423 3853809 3853810	3 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Screw, Steering pump bracket to engine Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3850422 3853405 3852196 3852496 3853266 3852498 3853331 3852497 3852305 3852574 3852079 3853236 3852126 3852423 3853809 3853810	1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Screw, Steering pump bracket to steering pump Clamp, Hose, water pump inlet Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	Return
3853405 3852196 3852496 3853266 3852498 3853331 3852497 3852305 3852574 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Screw, Adjustment bracket Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	Return
3852196 3852496 3853266 3852498 3853331 3852497 3852305 3852574 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Clamp, Hose, power steering pump to oil cooler Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	Return
3852496 3853266 3852498 3853331 3852497 3852305 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Washer, Rear steering pump bracket to pump Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	Return
3853266 3852498 3853331 3852497 3852305 3852574 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Screw, Steering pump bracket to engine, rear Nut, Power steering pump to bracket, stud V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852498 3853331 3852497 3852305 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1 1 1 1 1 1 1	Nut, Power steering pump to bracket, stud  V-belt, Power steering pump  O-ring, Pressure hose to steering pump  Hose, Gimbal hsg to oil cooler  Hose, Oil cooler to steering pump, return  Clamp, Hose to exhaust manifold  Pulley, Power steering pump  Nut, Clamp, oil cooler  Spacer, Oil cooler, power steering  Screw, Clamp, oil cooler  Cable clamp, P/S hoses to starter solenoid  Clamp, Engine oil cooler, power steering  Hose, Pump to actuator valve, pressure	
3853331 3852497 3852305 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1 1 1 1 1 1	V-belt, Power steering pump O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852497 3852305 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1 1 1 1 1	O-ring, Pressure hose to steering pump Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852305 3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose, Gimbal hsg to oil cooler Hose, Oil cooler to steering pump, return Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852574 3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1 1 1	Hose, Oil cooler to steering pump, return  Clamp, Hose to exhaust manifold  Pulley, Power steering pump  Nut, Clamp, oil cooler  Spacer, Oil cooler, power steering  Screw, Clamp, oil cooler  Cable clamp, P/S hoses to starter solenoid  Clamp, Engine oil cooler, power steering  Hose, Pump to actuator valve, pressure	
3853804 3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1	Clamp, Hose to exhaust manifold Pulley, Power steering pump Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1 1	Pulley, Power steering pump  Nut, Clamp, oil cooler  Spacer, Oil cooler, power steering  Screw, Clamp, oil cooler  Cable clamp, P/S hoses to starter solenoid  Clamp, Engine oil cooler, power steering  Hose, Pump to actuator valve, pressure	
3852079 3853236 3852126 3852423 3853809 3853810	1 1 1 1 1 1	Nut, Clamp, oil cooler Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853236 3852126 3852423 3853809 3853810	1 1 1 1	Spacer, Oil cooler, power steering Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3852423 3853809 3853810	1 1 1	Screw, Clamp, oil cooler Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853809 3853810	1 1 1	Cable clamp, P/S hoses to starter solenoid Clamp, Engine oil cooler, power steering Hose, Pump to actuator valve, pressure	
3853810	1	Hose, Pump to actuator valve, pressure	
3853810	1		
3853399		,	
	1	Screw, Brace to alternator bracket	
		Oil cooler. Power steering	
			Port
3852092			Port
3853315	1	Fitting, Hoses, power steering	
3850491		· · · · · · · · · · · · · · · · · · ·	
3853786	2	Clamp, Hose, water to oil cooler	
	3853315	3853406 1 3852306 1 3853557 1 3852840 1 3852434 1 3852092 1 3853315 1 3850491 1	3853406 1 Screw, Brace to power steering pump 3852306 1 Hose, Cooler to water pump 3853557 1 Screw, Clamp to flywheel housing 3852840 1 Oil cooler, Power steering 3852434 1 Clamp, Engine cable to intake manifold 3852092 1 Clamp, Engine cable to intake manifold, front 3853315 1 Fitting, Hoses, power steering 3850491 1 Power steering pump