


430A, 430B, 431A, 431B, 432A, 434A, 500B, 501B, 570A, 572A, 740B, DP-A, DP-A1, DP-A2, DP-C, DP-C1, DP-C1 1.95, DP-C1 2.30, DP-D, DP-D1, DP-D1 1.68, DP-D1 1.78, DP-D1 1.95, DP-D1 2.30, SP-A, SP-A1, SP-A2, SP-C, SP-C1

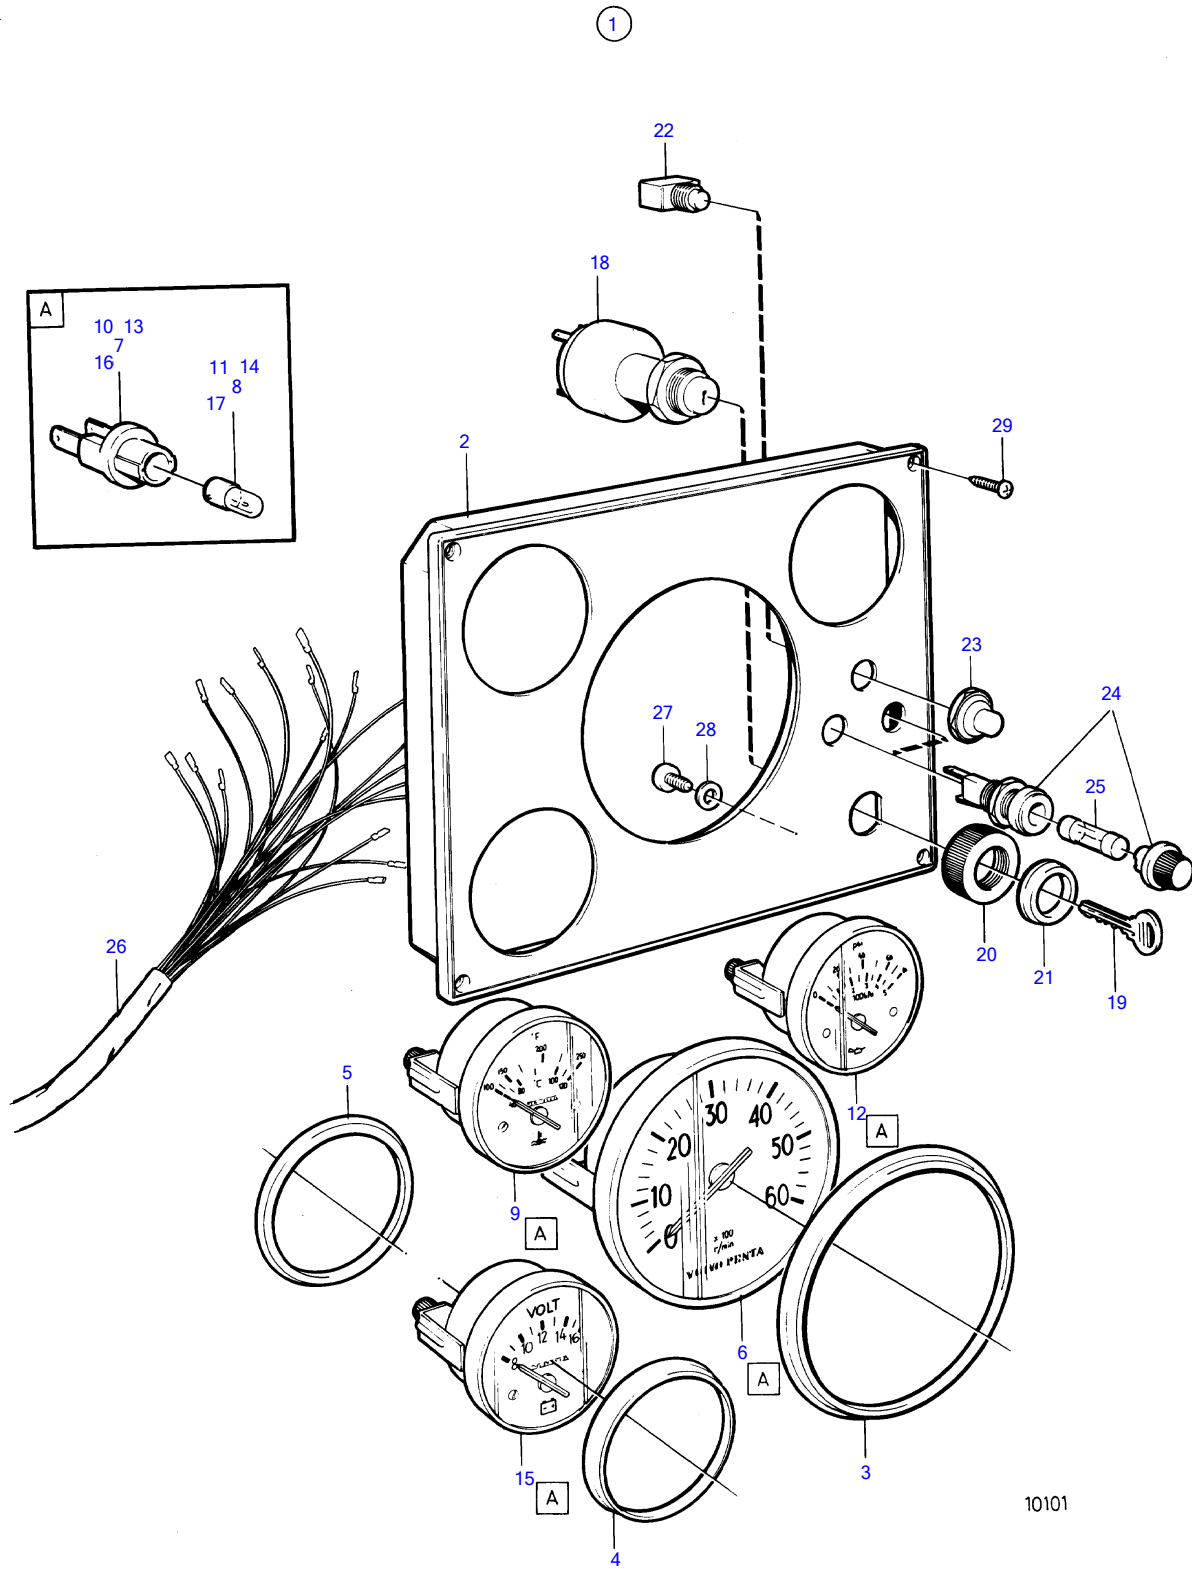

10101

430A, 430B, 431A, 431B, 432A, 434A, 500B, 501B, 570A, 572A, 740B, DP-A, DP-A1, DP-A2, DP-C, DP-C1, DP-C1 1.95, DP-C1 2.30, DP-D, DP-D1, DP-D1 1.68, DP-D1 1.78, DP-D1 1.95, DP-D1 2.30, SP-A, SP-A1, SP-A2, SP-C, SP-C1

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	856820	1	Instrument panel		
2	(856789)	1	• Instrument panel		Obsolete part
3	856805	1	• Ring		
4	858643	3	• Front ring		
5	828803	3	• Guide ring		
6	856808	1	• Tachometer		
7	863945	1	• • Lamp socket		
8	863946	1	• • Bulb		
9	856811	1	• Thermometer		
10	863945	1	• • Lamp socket		
11	863946	1	• • Bulb		
12	856812	1	• Pressure gauge		
13	863945	1	• • Lamp socket		
14	863946	1	• • Bulb		
15	863930	1	• Voltmeter		
16	863945	1	• • Lamp socket		
17	863946	1	• • Bulb		
18	856659	1	• Starter switch		
19	(3814511)	2	• • Key		Not sold separately, Obsolete part
			• Bulletin P-36-4-1	P-36-4-1-EN	Deleted Part No's for Keys
20		1	• • Nut		Not sold separately
21		1	• • Front ring		Not sold separately
22	828585	1	• Toggle switch		
23	828586	1	• Nut		
24	841073	2	• Fuse holder		
25	841518	2	• Fuse		8A
26		1	• Cable kit	12557	
27	949947	1	• Cross recessed screw		
28	941904	1	• Spring washer		
29	828647	4	• Screw		