

DESCRIPTION	SEE SEC.	NOTES
CONNECTING COMPONENTS REVERSE GEAR MS4A, MS4B	19762	501A/MS4
CONNECTING COMPONENTS, DRIVE SP-A, SP-A1, SP-A2, DP-A, DP-A1, DP-A2	19760	500A, 501A
HYDRAULIC PUMP, TRIM INSTRUMENT AND INSTALLATION COMPONENTS	19761	
REVERSE GEAR MS4A: 853397	19764	
REVERSE GEAR MS4A: 853781	19764B	
REVERSE GEAR MS4B: 854900	19765	
REVERSE GEAR MS4B: 854901	19765B	
DRIVE UNIT: SPA	19767	
DRIVE UNIT: SPA-1	19767B	
DRIVE UNIT: SPA-2	19767C	
DUOPROP DRIVE UNIT: 854021	19768	
DUOPROP DRIVE UNIT: 854642	19768B	
DUOPROP DRIVE UNIT RATIO 1, 95:1: 872371, DRIVE DP-A2	19769	
UPPER GEAR UNIT: DRIVE SP-A	19770	
UPPER GEAR UNIT: DRIVE SP-A1	19771	
UPPER GEAR UNIT: DRIVE SP-A2	19772	
INTERMEDIATE HOUSING: SPA	19773	
INTERMEDIATE HOUSING: SPA-1	19773B	
INTERMEDIATE HOUSING: SPA-2	19773C	
LOWER GEAR UNIT: DRIVE SP-A	19774	
LOWER GEAR UNIT: DRIVE SP-A1	19775	
UPPER GEAR UNIT: DRIVE DP-A	19776	
UPPER GEAR UNIT: DRIVE DP-A1	19777	
INTERMEDIATE HOUSING: DPA	19778	
INTERMEDIATE HOUSING: DPA-1	19778B	
LOWER GEAR UNIT: 854048, DRIVE DP-A	19779	
LOWER GEAR UNIT: 854643, DRIVE DP-A1	19780	
UPPER GEAR UNIT: DRIVE DP-A2	19781	
INTERMEDIATE HOUSING: DRIVE DP-A2	19782	
LOWER GEAR UNIT: DRIVE DP-A2	19783	