

DESCRIPTION	SEE SEC.	NOTES
CONNECTING COMPONENTS REVERSE GEAR MS5A, MS5B: A	19999	740A/MS5
CONNECTING COMPONENTS REVERSE GEAR MS5A, MS5B: B	19999B	740A/MS5
CONNECTING COMPONENTS WITHOUT EXHAUST PIPE, DRIVE DP-B, DP-B1	19993	740A
CONNECTING COMPONENTS WITH EXHAUST PIPE, DRIVE DP-B, DP-B1	19994	740A
HYDRAULIC PUMP, TRIM INSTRUMENT AND INSTALLATION COMPONENTS	19995	
CONNECTING COMPONENTS DRIVE UNIT DP-C	19996	740A
SHIELD WITH MOUNTING COMPONENTS	19997	
FLYWHEEL COVER, PRIMARY SHAFT AND CLAMPING RING KIT	19998	
EXHAUST PIPE AND COOLING WATER PIPE	20000	
HYDRAULIC CYLINDERS AND GROUND CABLE KIT	19991	
HYDRAULIC PUMP, TRIM INSTRUMENT AND INSTALLATION COMPONENTS	19992	
REVERSE GEAR MS5A: 853953	20002	
REVERSE GEAR MS5A: 853954	20002B	
REVERSE GEAR MS5A: 853955	20002C	
REVERSE GEAR MS5B: 854905	20003	
REVERSE GEAR MS5B: 854906	20003B	
REVERSE GEAR MS5B: 854907	20003C	
DUOPROP DRIVE UNIT: 854298	20005	
DUOPROP DRIVE UNIT: 872012	20005B	
DUOPROP DRIVE UNIT: DRIVE DP-C	20006	
UPPER GEAR UNIT: DRIVE DP-B	20007	
UPPER GEAR UNIT: DRIVE DP-B1	20008	
INTERMEDIATE HOUSING: DPB	20009	
INTERMEDIATE HOUSING: DPB-1	20009B	
LOWER GEAR UNIT: DRIVE DP-B	20010	
UPPER GEAR UNIT: DRIVE DP-C	20011	
INTERMEDIATE HOUSING: DRIVE DP-C	20012	
LOWER GEAR UNIT: 854485, DRIVE DP-C	20013	