



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	835555	1			REPL BY 841281
2		5	· MAIN BEARING CAP		
3	835037	5	· Screw		
4	835038	6	· Stud	02A-0600	
5	818989	2	· Locating pin		
6	835039	8	· Plug		
7	835040	3	· Locating pin		
8	835043	3	· Plug		
9	835040	2	· Locating pin		
10	952075	4	· Plug		
11	835496	1	· Plug		
12	841423	2	· Bushing	02A-0400	
13	841424	2	· Bushing	02A-0400	
14	841422	1	· Bearing	02A-0400	
15	835497	4	· Locating pin		
16	952069	1	· Plug		
17	835381	8	· Piston	02A-0300	
18	192134	2	· Plug		
19			· MAIN BEARING KIT	02A-0300	
20	940133	1	· Screw		
21	18651	1	· Gasket		
22	839484	1	Flywheel housing		
23	955551	6	· Screw		
24	839572	6	· Washer		
25	951075	6	· Snap ring		
26	835483	1	Plate		
27	955512	5	Screw		
28	941906	5	Spring washer		
29	940162	6	Screw		L = 38 MM
30	955537	1	Screw		L = 51 MM
31	942336	7	Spring washer		
32	940097	7	Washer		