



6117

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	841350	1	Cylinder block		
2		5	· BEARING CAP		
3	835037	5	· Screw		
4	835038	5	· Stud	02A-0650	
5	818989	2	· Locating pin		
6	835039	8	· Plug		
7	835040	2	· Locating pin		
8	835043	4	· Plug		
9	835040	2	· Locating pin		
10	952075	5	· Plug		
11	835496	1	· Plug		
12	841423	2	· Bushing		
13	841424	2	· Bushing		
14	841422	1	· Bearing		
15	835497	4	· Locating pin		
16	952069	1	· Plug		
17	826467	8	· Piston	02A-0300	
18	940133	1	· Screw		
19	18651	1	· Gasket		
20	192134	2	· Plug		
21			· MAIN BEARING KIT	02A-0300	
23	839484	1	Flywheel housing		
24	955551	6	· Screw		
25	839572	6	· Washer		
26	951075	6	· Snap ring		
27	835483	1	Plate		
28	955512	5	Screw		
29	940135	5	Screw		
30	955537	1	Screw		L = 51 MM
31	940162	5	Screw		L = 38 MM
32	942336	6	Spring washer		
33	940097	3	Washer		
34	819496	1	Spacer sleeve		