



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.
1	841350	1	Cylinder block	
2		5	· BEARING CAP	
3	835037	5	· Screw	
4	835038	5	· Stud	02A-0650
5	818989	2	· Locating pin	
6	835039	8	· Plug	
7	835040	2	· Locating pin	
8	835043	4	· Plug	
9	835040	2	· Locating pin	
10	952075	5	· Plug	
11	835496	1	· Plug	
12	841423	2	· Bushing	
13	841424	2	· Bushing	
14	841422	1	· Bearing	
15	835497	4	· Locating pin	
16	952069	1	· Plug	
17	826467	8	· Piston	02A-0300
18	940133	1	· Screw	
19	18651	1	· Gasket	
20	192134	2	· Plug	
21			· MAIN BEARING KIT	02A-0300
22	835977	1	Flywheel housing	
27	826448	1	Cover plate	
28	947224	5	Screw	
31	941939	6	Screw	
32	942336	6	Spring washer	