



9019

AQ205A

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	855326	1	Starter motor		
				030-0450	
2	835424	1	Screw		
3	835425	1	Screw		
4	942336	2	Spring washer		
5	855315	1	Anchorage		
6	940113	1	Screw		
7	941907	1	Spring washer		
8	941906	1	Spring washer		
9	955825	1	Nut		
10	841194	X	Adjusting washer		
11		1	ALTERNATOR AND INSTALLATION COMPONENTS	030-0185	
12	958498	1	V-belt		SEE GROUP 2B
13	835630	1	Temperature sensor		SEE GROUP 2B
	835649	1	Sender		SEE GROUP 9. FOR FLYING BRIDGE.
14	856143	1	Distributor		
				030-0285	
15	835154	1	Gasket	IK	
16	841530	1	Clamp		
17	855824	1	Screw		
18	855675	2	Ignition cable		L = 590 MM
	855676	2	Ignition cable		L = 710 MM
	855677	2	Ignition cable		L = 775 MM
19	856272	1	Ignition cable		L = 216 MM
20	1219071	4	Retainer		
21	876046	1	Spark plug kit		SEE GROUP 10A. INCLUDED IN BASE ENGINE.
22	855706	1	Ignition coil		
23	834772	2	Nut		
24	856142	1	Bracket		SEE GROUP 2D
25	834371	1	Screw		
26	834784	1	Resistor		
27	809109	1	Elbow nipple		
28	835980	1	Nipple		
29	834920	1	Oil pressure sensor		
	834921	1	Oil pressure sensor		FOR FLYING BRIDGE.
30	841178	1	Fuse		40A
31	950013	2	Screw		
32	841822	1	Cable trunk		
33		X	CABLE AND TERMINALS	030-0625	
34	835671	X	Cable trunk		L = 3000 MM
	835670	X	Cable trunk		L = 6000 MM
35	841958	1	Instrument panel		USA
				030-0560	
	841960	1	Instrument panel		EUR
				030-0570	
	841957	1	Instrument panel		USA. WITHOUT FUEL GAUGE.
				030-0570	
36	841426	1	Screw		
37	948210	X	Strip clamp	030-0625	
38	942810	1	Clamp		
39	942336	1	Spring washer		
40	955534	1	Screw		
41	1585449	1	Gasket		
42	852986	1	Current bar		
43	855330	1	Nut		
44	855798	1	Protecting sleeve		
45	940109	1	Lock washer		
46	970943	1	Screw		(955314)
47	856355	2	Fuse		55A (853502)

