



7529

BB260B

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	855334	1	Starter motor		
		X	· COMPONENTS NOT SPEC.		
2	940134	1	Screw		
3	941909	1	Spring washer		
4A	855330	1	Nut		
4B	855798	1	Protecting sleeve		
4C	940109	1	Lock washer		
4D	955314	1	Screw		
4E	941905	2	Spring washer		
4F	955780	2	Nut		
5	841177	1	Relay		
6		1	ALTERNATOR AND INSTALLATION COMPONENTS	030-0193	
7	958498	1	V-belt		
8	835630	1	Temperature sensor		SEE GROUP 2B
	835649	1	Sender		SEE GROUP 9. FOR FLYING BRIDGE.
9	841890	1	Switch		SEE GROUP 2A
	835649	1	Sender		SEE GROUP 9. FOR FLYING BRIDGE.
10	841069	1	Distributor		
				030-0200	
11	835154	1	Gasket	IK	
12	841530	1	Clamp		
13	855824	1	Screw		
14	941744	1	Washer		
15	855678	2	Ignition cable		CYL 1, 2
	855677	2	Ignition cable		CYL 3, 4
	855676	2	Ignition cable		CYL 5, 6
	855675	2	Ignition cable		CYL 7, 8
16	855674	1	Ignition cable		
17	876047	2	Spark plug kit		
18	835998	1	Ignition coil		
19	834772	2	Nut		
20	834700	1	Bracket		SEE GROUP 2D
21	1219561	1	Clamp		
22	834371	1	Screw		
23	835999	1	Resistor		
24	834784	1	Resistor		
25	841891	1	Nipple		
25A	16325	1	Plug		
26	834920	1	Oil pressure sensor		
	834921	1	Oil pressure sensor		(835651). FOR FLYING BRIDGE.
27	841599	1	Pressure monitor		
28	841178	1	Fuse		40A
29	950013	2	Screw		
30	855316	1	Cable trunk		
31		X	· CABLES AND TERMINALS	030-0625	

BB260B

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
32	841426	1	Screw		
35	852049	1	Switch		
36	852093	1	Bracket		
37	956050	2	Screw		
38	955890	2	Washer		
39	955778	2	Nut		
40	948210	X	Strip clamp		
41	835429	2	Retainer		
42	835428	2	Retainer		
43	841426	3	Screw		
44	835427	2	Retainer		
45	955534	1	Screw		
46	942336	1	Spring washer		
47	942810	1	Clamp		