


DISTRIBUTOR & IGNITION COIL

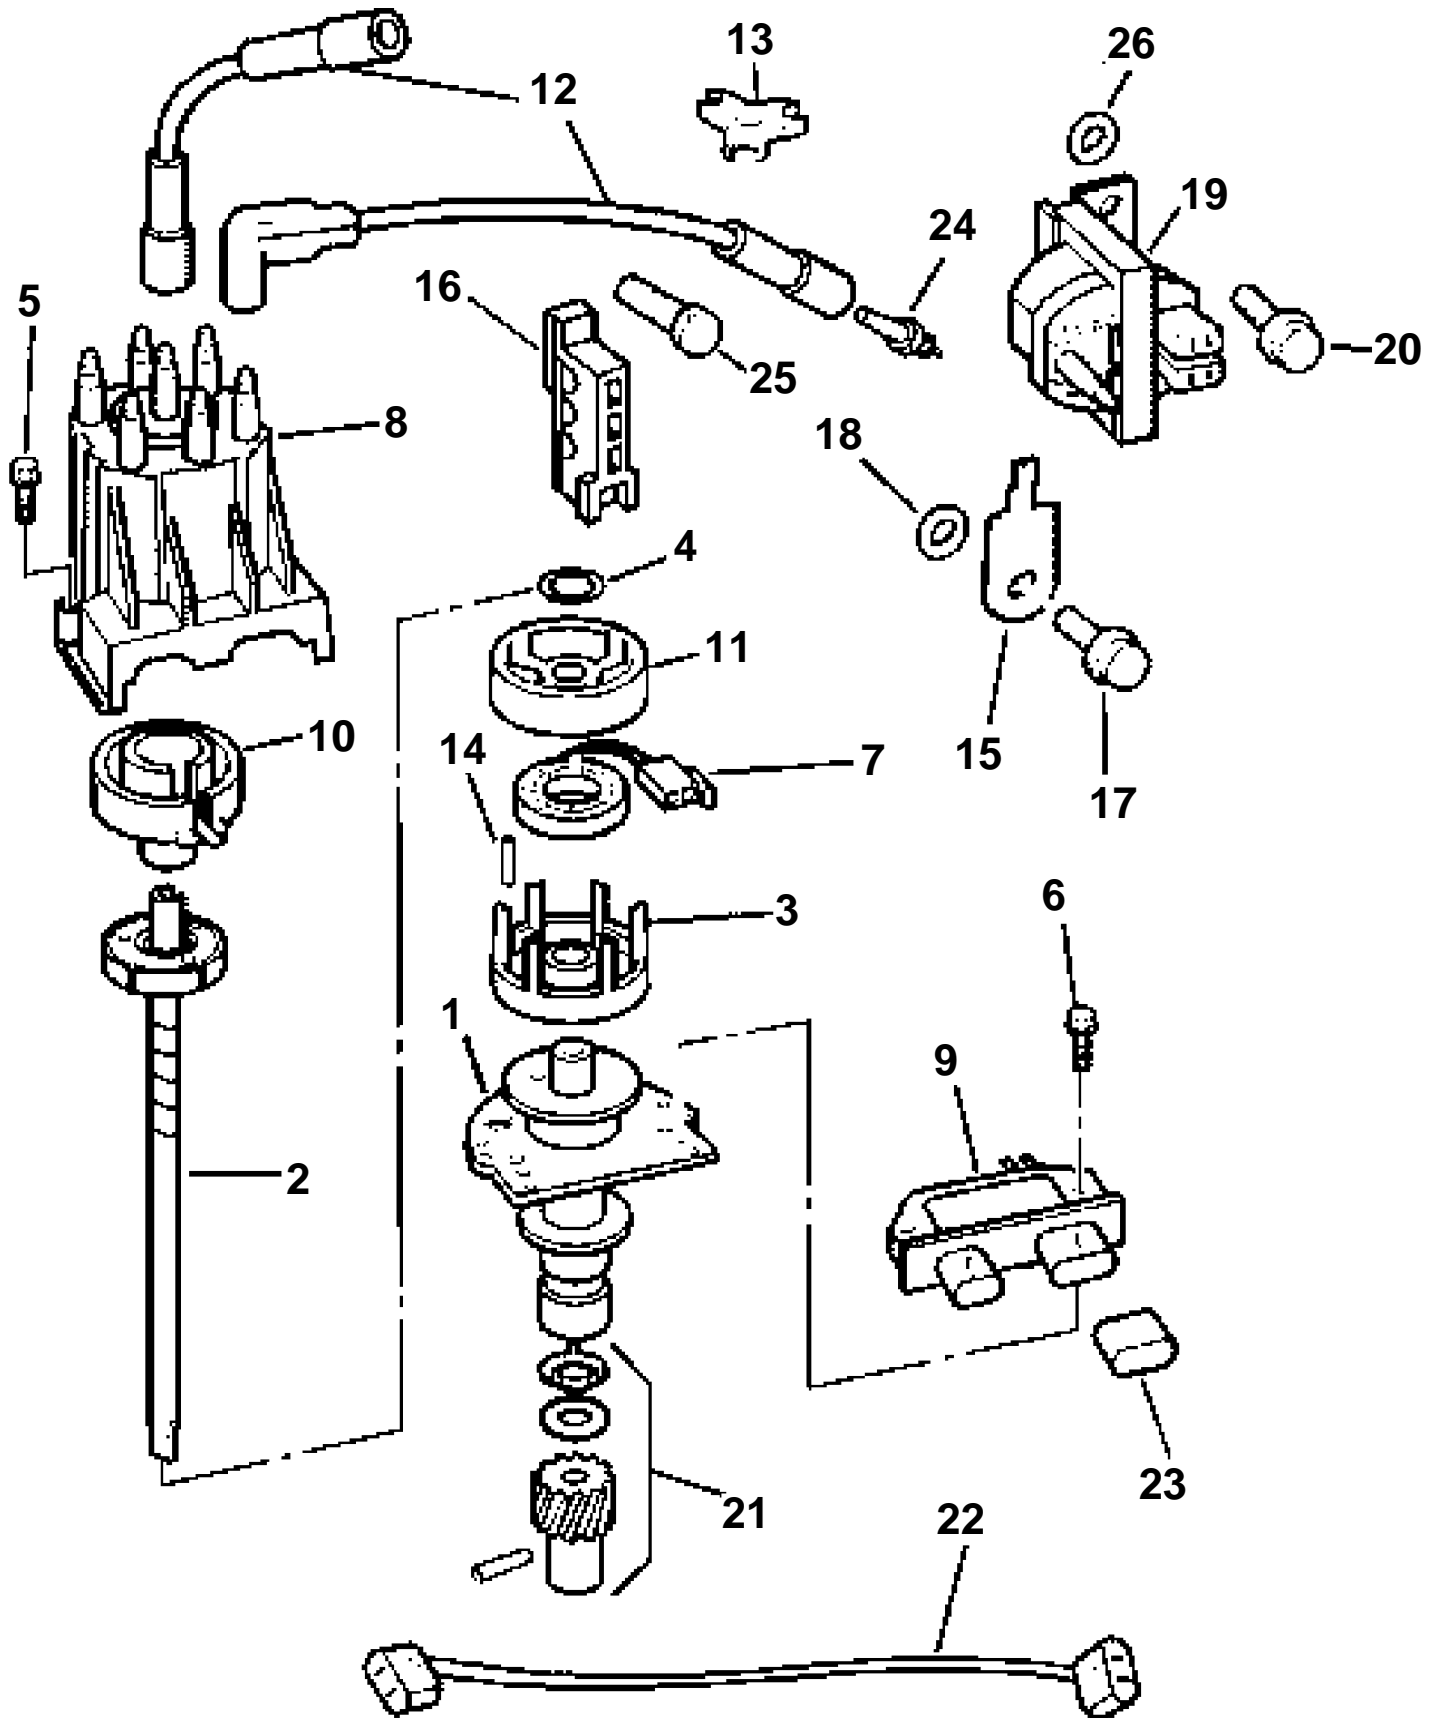

DISTRIBUTOR & IGNITION COIL

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	3854310	1	Housing, Distributor	
2	3854312	1	Shaft, Distributor	
3	3854309	1	Pole shoe	
4	3853317	1	Retainer	
5	3853318	2	Screw	
6	3853319	2	Screw, Module	
7	3854001		Coil	As required
8	3854331	1	Distributor cap	
9	3854003	1	Module	
10	3854311	1	Rotor, Distributor	
11	3854308	1	Shield, Pickup coil	
12	3857165	1	Ignition cable kit	
13	3852492	4	Retainer, 3 wire ignition leads	
	3852491	2	Retainer, 4 wire ignition leads	
14	3853316	1	Locating pin, Locating	
15	3856052	2	Bracket, Lead retainer, 90°	Rear
	3856053	2	Bracket, Lead retainer to exhaust manifold	Rear
16	3852619	2	Retainer, Spark plug leads to cylinder head	Rear
17	3853557	1	Screw, Retainer, spark plug lead to cyl head	
18	3852162	1	Washer, Spark plug lead to cylinder head	Rear, starboard
19	3854922	1	Ignition coil	
20	3853266	2	Screw, Coil bracket	
21	3854557	1	Repair kit, Distributor gear	
		1	· WASHER	
		1	· TANG WASHER	
		1	· PIN	
		1	· GEAR, Distributor	
22	3854084	1	Cable, Distributor to ignition coil	Gi
23	3850645	1	Cap, Module assy	GL
24	3856759	1	Spark plug kit, 6-pack	
	3851858	1	Spark plug kit, 24-pack	
25	3853266	2	Screw, Coil bracket assy & lift eye to head	
26	3852162	1	Washer, Spacer, coil bracket to head	
	3810232	1	Set	Not shown