



ENGINE WIRE HARNESS, Gi

REF	PART NO.	QTY	DESCRIPTION
1	3860037	1	Cable harness
2	3857189	1	Seal, Knock sensor
3	3853480	1	Terminal casing, Knock sensor
4	3852527	2	Cable terminal
5	3852084	1	Cable terminal
6	3853320	1	Cover
7	3852229	4	Cable terminal
8	3853565	2	Connector
9	3854244	1	Cable, Ignition coil
10	3852235	1	Cable terminal, Alternator excite
11	3852038	1	Cable terminal, Alternator output
12	3852233	1	Cable terminal, Alternator sense
13	3852210	1	Bracket, Fuel pump ignition relay
14	3852246	4	Cable terminal
15	3852247	4	Cable terminal
16	3853679	2	Cable terminal, High pressure fuel pump
17	3855021	2	Housing
18	3853681	2	Cover
19	3853679	2	Cable terminal, Low pressure fuel pump
20	3852235	1	Cable terminal, Starter solenoid, starter terminal
21	3852527	1	Cable terminal, Alternator output
22	3852527	1	Cable terminal, Starter solenoid
23	3852245	1	Cable terminal
24	3854164	1	Fuse, 50 amp
25	3854192	1	Connector, Starter relay
26	3852227	1	Cable terminal, Starter relay
27	3852254	4	Cable terminal
28	3850045	1	
29	3857189	3	Seal
30	3852233	1	Cable terminal
31	3852158	1	Lock strap
32	3852229	1	Cable terminal
33	3853565	1	Connector, 2 pin
34	514106	1	
35	3857189	2	Seal
36	3850671	2	Cable terminal, Injector
37	3857142	1	Connector
38	3852233	1	Cable terminal
39	514106	1	Distributor
40	979686	2	Fuse, 40 amp
41	966329	2	Fuse, 15 amp
42	968547	2	Fuse, 20 amp
43	3860455	3	Fuse holder
44	3860098	1	Ecu, Electronic control module
45	3854905	1	Sensor
46	3850397	1	Ect sensor
47	3850396	1	Sender
48	3854672	1	Control unit
49	3850272	1	Bracket, Knock module
50	3852115	2	Screw, Knock module bracket
51	3851990	1	Bracket
52	3852115	2	Screw, Bracket to adapter
53	3855578	4	Screw, ECM to bracket
54	3852115	2	Screw, Knock module to bracket
55	3850688	4	Hose, MAP sensor
56	3852115	2	Screw, MAP sensor to bracket
57	3852172	1	Clamp, Hose, MAP sensor