



## MB10A

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	Starter alternator		
2		1	· HOUSING		
3		4	· POLE SHOE		
4		4	· Screw		
5		1	· Field winding		
6		1	· Field winding		
7		1	· Field winding		
8		1	· Field winding		
9		1	· Screw		
10		1	· Isolation		
11		1	· Insulating bushing		
12		1	· Washer		TH = 0.6mm
13		2	· Washer		TH=1.0mm
14	941907	2	· Spring washer		
15	955782	2	· Hexagon nut		
16		1	· Washer		
17		1	· Screw		
18		X	· CABLES AND TERMINALS	13576	
19		1	· Screw		
20		1	· Screw		
21		2	· Isolation		
22		4	· Washer		
23	941905	4	· Spring washer		
24	955780	4	· Hexagon nut		
25		1	· Local part		L = 240 MM
26		1			L = 80 MM
27		1	· Screw		
28	941905	1	· Spring washer		
29		1	· Washer		
30		1	· Bearing shield		
31		8	· Screw		
32		8	· Washer		
33		1	· End plate		
34		4	· · Carbon holder		
35		2	· · BASE PLATE		
36		2	· · Isolation plate		
37		4	· INSULATING WASHER		
38		4	· · Washer		
39		2	· · Local part		
40		8	· · Rivet		
41		1	· · Carbon brush set		
42		4	· · Spring		
43	956059	4	· · Cross recessed screw		
44		4	· · Washer		
45		8	· Screw		
46		8	· Washer		
47		1	· Anchor		
48		1	· · Washer		
49		1	· · Washer		
50		1	· · Bearing		
51		1	· · Washer		
52		1	· · Ring		
53		1	· · Ring		
54		1	· · Safety washer		
55	11009	1	· · Ball bearing		
56		4	· Cross recessed screw		
57	910115	1	· Woodruff key		
58	941911	1	· Spring washer		
59	955804	1	· Hexagon nut		
60		1	· Safety band		
61		1	· Cross recessed screw		