
FLYWHEEL HOUSING AND MOUNTS, DPX

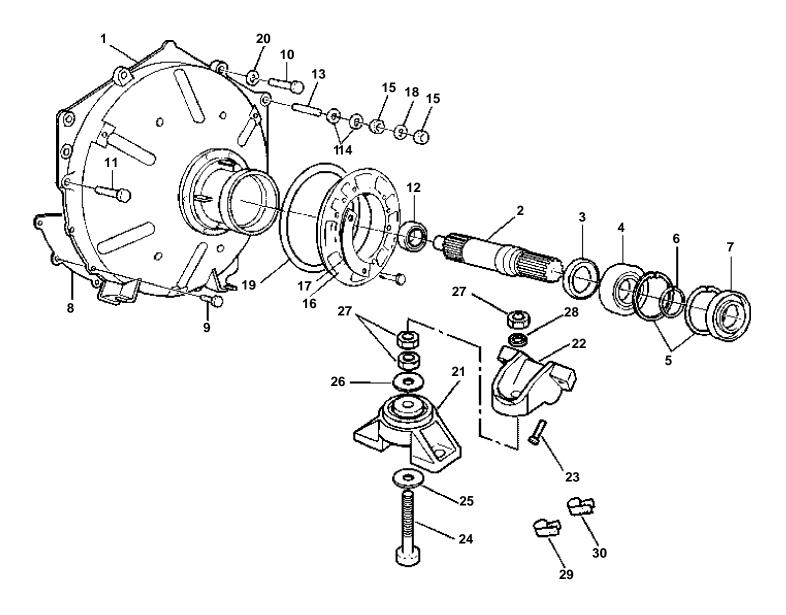

GR71910



FLYWHEEL HOUSING AND MOUNTS, DPX

1 3856699 1 Flywheel housing 2 873013 1 Primary shaft 3 958859 1 Sealing ring, Primary shaft 4 3851019 1 Ball bearing, Primary shaft 5 914533 2 Snap ring, Primary shaft 6 914462 1 Lock ring, Primary shaft 7 958860 1 Sealing ring, Primary shaft 8 854939 1 Cover plate, Flywheel housing 9 947224 5 Screw, Flywheel housing to engine 11 3850753 3 Screw, Flywheel housing to engine 12 856917 1 Bearing, Primary shaft to crankshaft 13 3850571 2 Stud, Flywheel housing to engine 14 3852058 2 Washer 15 3852065 4 Nut 16 854315 1 Clamping ring kit, Flywheel housing 17 806624 3 Striker plate, Clamp ring 18 3852070 2 Washer, Ground stud 18 3852070 2 </th <th>REF</th> <th>PART NO.</th> <th>QTY</th> <th>DESCRIPTION</th> <th>NOTES</th>	REF	PART NO.	QTY	DESCRIPTION	NOTES
2 873013 1 Primary shaft 3 958859 1 Sealing ring, Primary shaft 4 3851019 1 Ball bearing, Primary shaft 5 914533 2 Snap ring, Primary shaft 6 914462 1 Lock ring, Primary shaft 7 955860 1 Sealing ring, Primary shaft 8 854939 1 Cover plate, Flywheel housing 9 947224 5 Screw, Flywheel cover to housing 10 3853547 1 Screw 11 3850753 3 Screw, Flywheel housing to engine 12 856917 1 Bearing, Primary shaft to crankshaft 13 3850571 2 Stud, Flywheel housing to engine 14 3852058 2 Washer 3852065 4 Nut 16 854315 1 Clamp ring 18 3852070 2 Washer, Ground stud 19 804190 2 Rubber ring, Clamp ring <					
3 958859 1 Sealing ring, Primary shaft 4 3851019 1 Ball bearing, Primary shaft 5 914533 2 Snap ring, Primary shaft 6 914462 1 Lock ring, Primary shaft 7 958860 1 Sealing ring, Primary shaft 8 855439 1 Cover plate, Flywheel housing 9 947224 5 Screw, Flywheel housing to engine 10 3850753 3 Screw, Flywheel housing to engine 11 3850751 1 Bearing, Primary shaft to crankshaft 13 3850751 2 Stud, Flywheel housing to engine 14 3852058 2 Washer 3852062 2 Lock washer Ground 16 854315 1 Clamping ring kit, Flywheel housing Not shown 17 806624 3 Striker plate, Clamp ring Port and starboard 18 3852070 2 Washer, Ground stud Port and starboard 19 804190					
4 3851019 1 Ball bearing, Primary shaft 5 914533 2 Snap ring, Primary shaft 6 914462 1 Lock ring, Primary shaft 7 958860 1 Sealing ring, Primary shaft 8 854393 1 Cover plate, Flywheel housing 9 947224 5 Screw, Flywheel cover to housing 10 3853547 1 Screw 11 3850753 3 Screw, Flywheel housing to engine 12 856917 1 Bearing, Primary shaft to crankshaft 13 3850571 2 String, Primary shaft to crankshaft 3852058 2 Washer Ground 14 3852058 2 Washer 3852002 2 Lock washer Not shown 17 806624 3 Striker plate, Clamp ring Not shown 17 806624 2 Washer, Ground stud Port and starboard 20 3852056 2 Washer, Spacer, reservoir bracket Port and starboard 21 3853266 2 Striker				Sealing ring, Primary shaft	
5 914533 2 Snap ring, Primary shaft 6 914462 1 Lock ring, Primary shaft 7 958860 1 Sealing ring, Primary shaft 8 854939 1 Cover plate, Flywheel housing 9 947224 5 Screw, Flywheel cover to housing 10 3850457 1 Screw, Flywheel housing to engine 11 3850753 2 Stud, Flywheel housing to engine 12 856917 1 Bearing, Primary shaft to crankshaft 13 3850751 2 Stud, Flywheel housing to engine Ground 14 3852052 2 Vasher Ground Mot 15 3852062 2 Lock washer Not shown Mot shown 17 806624 3 + Striker plate, Clamp ring Not shown 18 3852070 2 Washer, Ground stud Port and starboar 20 3852058 2 Washer, Spacer, reservoir bracket Port and starboar 21 3853805	4				
7 958860 1 Sealing ring, Primary shaft 8 854393 1 Cover plate, Flywheel housing 9 947224 5 Screw, Flywheel cover to housing 10 3853647 1 Screw 11 3850753 3 Screw, Flywheel housing to engine 12 856917 1 Bearing, Primary shaft to crankshaft 13 3850571 2 Stud, Flywheel housing to engine Ground 14 3852058 2 Washer Ground 15 3852065 4 Nut Not shown 16 854315 1 Clamping ring kit, Flywheel housing Not shown 17 806624 3 Striker plate, Clamp ring Not shown 18 3852070 2 Washer, Ground stud Port and starboard 19 804190 2 Rubber cushion, Engine front Port and starboard 22 3853805 2 Washer, Spacer, reservoir bracket Port and starboard 23 3853266 2 Screw, Front mount bracket to engine Front 24	5	914533	2		
7 958860 1 Sealing ring, Primary shaft 8 854939 1 Cover plate, Flywheel housing	6	914462		Lock ring, Primary shaft	
99472245Screw, Flywheel cover to housing1038535471Screw1138507533Screw, Flywheel housing to engine128569171Bearing, Primary shaft to crankshaft1338505712Stud, Flywheel housing to engineGround1438520582Washer38520022Lock washer1538520654Nut168543151Clamping ring kit, Flywheel housingNot shown178066243• Striker plate, Clamp ring1838520702• Washer, Ground stud198041902• Rubber ring, Clamp ring2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine frontPort and starboard2238573266Screw, Front mount bracket to engine2338520902Lock washer, Bolt, front mount, engine2638524332Washer, Front mount2738520216Nut, Bolt, mount bracketFront283852482Washer, Front mount2938521461Clamp, Starter leads to stbd bracket	7	958860	1	Sealing ring, Primary shaft	
99472245Screw, Flywheel cover to housing1038535471Screw1138507533Screw, Flywheel housing to engine128569171Bearing, Primary shaft to crankshaft1338505712Stud, Flywheel housing to engineGround1438520582Washer38520022Lock washer1538520654Nut168543151Clamping ring kit, Flywheel housingNot shown178066243• Striker plate, Clamp ring1838520702• Washer, Ground stud198041902• Rubber ring, Clamp ring2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine frontPort and starboard2238573266Screw, Front mount bracket to engine2338520902Lock washer, Bolt, front mount, engine2638524332Washer, Front mount2738520216Nut, Bolt, mount bracketFront283852482Washer, Front mount2938521461Clamp, Starter leads to stbd bracket	8	854939			
10 3853547 1 Screw 11 3850753 3 Screw, Flywheel housing to engine			5		
128569171Bearing, Primary shaft to crankshaftGround1338505712Stud, Flywheel housing to engineGround1438520582WasherGround38520022Lock washerGround1538520654NutState168543151Clamping ring kit, Flywheel housingNot shown178066243• Striker plate, Clamp ringStriker plate, Clamp ring1838520702• Washer, Ground studStriker plate, Clamp ring198041902• Rubber ring, Clamp ringPort and starboard2038520582Washer, Spacer, reservoir bracketPort and starboard213853052Rubber cushion, Engine frontPort and starboard2338532662Screw, Front, port and starboardFront2438520902Lock washer, Bolt, front mount, engineFront2538520302Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountFront2838524282Washer, Front mountFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketLower	10	3853547			
1338505712Stud, Flywheel housing to engineGround1438520582Washer	11		3	Screw, Flywheel housing to engine	
1438520582Washer38520022Lock washer					
38520022Lock washer1538520654Nut168543151Clamping ring kit, Flywheel housingNot shown178066243• Striker plate, Clamp ringNot shown1838520702• Washer, Ground stud1198041902• Rubber ring, Clamp ring12038520582Washer, Spacer, reservoir bracket22138538052Rubber cushion, Engine frontPort and starboard2238578442Bracket, Front, port and starboard1233853266Screw, Front mount bracket to engine52438520902Lock washer, Bolt, front mount, engine52638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracket5	13	3850571	2	Stud, Flywheel housing to engine	Ground
1538520654Nut168543151Clamping ring kit, Flywheel housingNot shown178066243• Striker plate, Clamp ringNot shown1838520702• Washer, Ground studImage: Striker plate, Clamp ring1838520582• Washer, Ground studImage: Striker plate, Clamp ring2038520582Washer, Spacer, reservoir bracketImage: Striker plate, Clamp ring2138538052Rubber cushion, Engine frontPort and starboard2238578442Bracket, Front, port and starboardImage: Striker plate, Font, port and starboard2338533266Screw, Front mount bracket to engineImage: Striker plate, Striker plate, engine243852662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineImage: Striker plate, Front2638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketImage: Striker plate, Starter leads to stbd bracket	14	3852058	2	Washer	
168543151Clamping ring kit, Flywheel housingNot shown178066243• Striker plate, Clamp ring		3852002	2	Lock washer	
178066243Striker plate, Clamp ring1838520702Washer, Ground stud198041902Rubber ring, Clamp ring2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine front2238578442Bracket, Front, port and starboard2338533266Screw, Front mount bracket to engine2438526662Screw, Front mount2538520902Lock washer, Bolt, front mount, engine2638524332Washer, Front mount2738520216Nut, Bolt, mount bracket2838524282Washer, Front mount29385214612938521461	15	3852065	4	Nut	
1838520702· Washer, Ground stud198041902· Rubber ring, Clamp ring2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine frontPort and starboard2238578442Bracket, Front, port and starboardPort and starboard2338533266Screw, Front mount bracket to engineFront2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountFront2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketFront	16			Clamping ring kit, Flywheel housing	Not shown
198041902• Rubber ring, Clamp ring2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine frontPort and starboar2238578442Bracket, Front, port and starboardPort and starboard2338533266Screw, Front mount bracket to engineFront2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountFront2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketFront	17	806624	3	Striker plate, Clamp ring	
198041902• Rubber ring, Clamp ring2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine frontPort and starboar2238578442Bracket, Front, port and starboardPort and starboard2338533266Screw, Front mount bracket to engineFront2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketFront	18	3852070	2	Washer, Ground stud	
2038520582Washer, Spacer, reservoir bracket2138538052Rubber cushion, Engine frontPort and starboar2238578442Bracket, Front, port and starboard2338533266Screw, Front mount bracket to engine2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engine2638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracket	19	804190			
2138538052Rubber cushion, Engine frontPort and starboar2238578442Bracket, Front, port and starboard		3852058	2	Washer, Spacer, reservoir bracket	
2338533266Screw, Front mount bracket to engine2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketFront	21	3853805			Port and starboard
2338533266Screw, Front mount bracket to engine2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketFront	22	3857844	2	Bracket, Front, port and starboard	
2438525662Screw, Front mountFront2538520902Lock washer, Bolt, front mount, engineUpper2638524332Washer, Front mountUpper2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracketFront	23			Screw, Front mount bracket to engine	
26 3852433 2 Washer, Front mount Upper 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3852146 1 Clamp, Starter leads to stbd bracket Example		3852566	2		Front
26 3852433 2 Washer, Front mount Upper 27 3852021 6 Nut, Bolt, mount bracket Front 28 3852428 2 Washer, Front mount Lower 29 3852146 1 Clamp, Starter leads to stbd bracket Example	25	3852090	2	Lock washer, Bolt, front mount, engine	
2738520216Nut, Bolt, mount bracketFront2838524282Washer, Front mountLower2938521461Clamp, Starter leads to stbd bracket	26	3852433	2	Washer, Front mount	
29 3852146 1 Clamp, Starter leads to stbd bracket	27	3852021	6	Nut, Bolt, mount bracket	Front
			2		Lower
	29		1		
	30	3853312	1	Clamp, Hose to mount	Stbd