



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		45194A26	OUTBOARD POWER TRIM ASSE	1		6
1		76395A 5	HYDRAULIC PUMP ASSEMBLY	1	SEE HYDRAULIC PUMP ASSEMI	
2	25	21720	"O" RING, HYDRAULIC PUMF	4		
3	10	28634	SCREW, FILLER - HYDRAULI	1		
4	12	20260	WASHER, SEALING - HYDRAI	1		
5	10	38257	SCREW, VENT - HYDRAULIC	1		
6	37	55901	DECAL, INSTRUCTION - HYDR	1		
7		32979	BATTERY LEAD (POSITIVE)	1		
8		32988	BATTERY LEAD (NEGATIVE)	1		
9		45336	PLATE, MANIFOLD	1		
10		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	21720	"O" RING, HYDRAULIC PUMF	4	SEE REFERENCE #2	
11	25	45254	"O" RING, CONTROL VALVE	1		
12	25	21720	"O" RING, CONTROL VALVE	1		
13	25	45253	"O" RING, CONTROL VALVE	2		
14	10	56500	SCREW	4	CONTROL VALVE AND MANIFOL	
15	13	26992	LOCKWASHER, CONTROL VAL	4		
16	22	38609	PLUG, CONTROL VALVE (3/8-2	2		
17	22	46008	PLUG, CONTROL VALVE (1/2-2)	2		
18	84	74023	CONNECTOR AND HARNESS	1		
19		45559	TERMINAL BLOCK, HYDRAULIC	1		
20	10	35519	SCREW, TERMINAL BLOCK TO	2		
21	10	62568	SCREW, HARNESS LEADS TO	2		
22		45377	BRACKET, MOUNTING - HYDR	2		
23	10	24234	SCREW, MOUNTING BRACKET	4		
24	13	39107	LOCKWASHER, MOUNTING BR	4		
25	11	21908	NUT, MOUNTING BRACKET SC	4		
26	10	28009	BOLT, HYDRAULIC PUMP TO B	2		
27	11	35304	NUT, HYDRAULIC PUMP BOLT	2		
28	89	68258	STARTER SOLENOID	1		
29	13	26996	LOCKWASHER, STARTER SOL	2		
30	11	68219	NUT, STARTER SOLENOID TE	2		
31	13	26993	LOCKWASHER, STARTER SOL	2		
32	11	68292	NUT, STARTER SOLENOID TE	2		
33		46265	BOOT, RUBBER - STARTER SO	2		
34		74407	BRACKET, MOUNTING - START	1		
35	10	21140	SCREW, MOUNTING BRACKET	2		
36	13	26992	LOCKWASHER, MOUNTING BR	2		
37	10	69052	SCREW, STARTER SOLENOID	2		
38	13	26992	LOCKWASHER, STARTER SOL	2		