



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		25444	STARTER MOTOR ASSEMBLY, C	1...		
2	18	25621	COTTER PIN, FASTENING NUT	1...		
3	11	25622	NUT, FASTENING	1...		
4	23	25623	COLLAR, SPACING	1...		
5	24	25624	SPRING, ANTI-DRIFT	1...		
6	12	25625	WASHER, ANTI-DRIFT SPRING	1...		
7	23	25626	SLEEVE, ANTI-DRIFT SPRING	1...		
8	43	25627	GEAR, PINION - DRIVE	1...		
9		25628	SHAFT, SCREW	1...		
10	12	25629	WASHER, RUBBER - RECOIL C	1...		
11	12	25630	WASHER, THRUST	2...		
12	24	25631	SPRING, RE-ENTRY	1...		
13		25632	SUPPORT, DRIVE SPRING	1...		
14	24	25633	SPRING, DRIVE	1...		
15		25473	ADAPTOR, TOP CAP	1...		
16	53	25634	RING, RETAINING- SPRING	1...		
17	53	25635	RING, SPRING	1...		
18		25636	PLATE, DRIVE END	1...		
19	23	25637	BUSHING, DRIVE END PLATE	1...		
20	15	25638005	SHIM, PLATE TO ARMATURE	AR...		3
20	15	25639010	SHIM, PLATE TO ARMATURE	AR...		3
20	15	25640015	SHIM, PLATE TO ARMATURE	AR...		3
21		25641	ARMATURE	1...		
22	12	25642	WASHER, SHIMMING	1...		
23		25643	HOUSING ASSEMBLY, STARTE	1...		
24		25652	BRUSH, HOUSING ASSEMBL'	1...		
25		25653	BRUSH, HOUSING ASSEMBL'	1...		
26		25654	BRUSH, END PLATE	2...		
27	24	25655	SPRING, BRUSH	4...		
28	10	25656	SCREW, FASTENING - BRUSH	2...		
29		25657	END PLATE, COMMUTATOR	1...		
--	23	29461	BUSHING, COMMUTATOR EN	1...		
30		25659	STRIP, INSULATION - END PLA	1...		
31		25660	COVER, END PLATE	1...		
32	12	23243	WASHER, THRU BOLT	2...		
33	13	26992	LOCKWASHER, THRU BOLT	2...		
34	10	25646	BOLT, THRU - COVER TO ADAF	2...		
35	12	25647	WASHER, INSULATION - HOUS	1...		
36	12	25648	WASHER, HOUSING TERMINAL	2...		
37	13	21272	LOCKWASHER, HOUSING TER	3...		