



18056

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	46	72774A56	PUMP ASSEMBLY, Seawater	1		
1	46	72774A50	PUMP ASSEMBLY, Seawater	1		
2	46	72774A40	BODY ASSEMBLY, Seawater	1		
3		87631A 4	COVER KIT	1		
4	10	73275	SCREW, (.312-18 x 2.88)	2		
4	10	99347	SCREW, (.312-18 x 3.75)	3		
5	12	20084	WASHER, (.328 x .562 x .062)	5		
6	27	805215 1	GASKET	1		
7		94916	WEAR PLATE	1		
8	27	94914	GASKET	2		
9	19	59504	PLUG	1		
10	47	59362 1	IMPELLER	1		
11	28	56662	KEY	1		
12		94576	WEAR PLATE	1		
13	25	94288	QUAD RING	1		
14	46	94913A 2	PUMP HOUSING ASSEMBLY	1		
15	26	90562	SEAL, (1.254 x .312)	2		
16	30	72961	BEARING, Ball	2		
17		59501A 1	SHAFT	1		
18	53	23720	RING, Retaining	1		
19	26	72785	SEAL	1		
20		47530	HUB	1		
21		52822T	PULLEY	1		
22	10	47277	SCREW, (.312-24 x .750)	4		
23	13	39107	LOCKWASHER, (.312)	4		
24	13	39107	LOCKWASHER, (.312)	3		
25	11	21908	NUT, (.312-18)	3		
26		89535T 1	BRACKET	1		
27	10	34353	SCREW, (.375-16 x 1.00)	2		
28	13	35048	LOCKWASHER, (.375)	2		
29	12	34714	WASHER	1		
30		89609 1	BRACE	1		
31	10	35786	SCREW, (.375-24 x 1.00)	1		
32	10	35786	SCREW, (.375-24 x 1.00)	1		
33	13	35048	LOCKWASHER, (.375)	1		
34	11	46335	NUT, (.375-24)	1		
35	22	32802	PLUG, Pipe (.125-27)	1		
36	57	13457T	BELT	1		
37	32	88795	HOSE	1		
38	54	815504220	CLAMP, Worm Gear	2		