



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		61086A 4	FRESH WATER COOLING KIT (M	1		
2	27	65128	GASKET, HEAT EXCHANGER E	1		
3		66221	CAP, HEAT EXCHANGER END	1		
4	10	66223	SCREW, CAP AND GASKET TO	1		
5	22	65129	ZINC ANODE, SEA WATER DR	1		
6	37	53237	DECAL, HEAT EXCHANGER	1		
7		61895	BRACKET, MOUNTING - HEAT I	1		
8	10	27165	SCREW, FRONT MOUNTING BF	2		
9	13	37459	LOCKWASHER, FRONT MOUN	2		
10	10	36359	SCREW, FRONT MOUNTING BF	2		
11		61899	BRACKET, MOUNTING - HEAT I	1		
12		61897	BRACKET, MOUNTING - HEAT I	1		
13	10	21625	SCREW, MOUNTING BRACKET	1		
14	11	20664	NUT, MOUNTING BRACKET AT	1		
15	10	21077	SCREW, MOUNTING BRACKET	1		
16	10	26632	SCREW, MOUNTING BRACKET	1		
17	23	57369	SPACER, MOUNTING BRACKET	1		
18	32	62250	HOSE, HEAT EXCHANGER TO	1		
19	54	32781	CLAMP, HEAT EXCHANGER TO	2		
20	54	62494	CLAMP, HOSE TO ENGINE MOL	1		
21	22	49676	ELBOW, FUEL LINE (90 DEGRE	1		
22		68673A 1	THERMOSTAT HOUSING ASSE	1		
23	27	33680	GASKET, THERMOSTAT HOUS	1		
24	10	20359	SCREW, THERMOSTAT HOUSI	1		
24	10	37612	SCREW, THERMOSTAT HOUSI	1		
25	22	52382	BUSHING, REDUCER - WATER	1		
26	22	32804	PLUG, THERMOSTAT HOUSIN	1		
27	27	33918	GASKET, RESERVOIR TO THEF	1		
28		59137	THERMOSTAT	1		
29		61893A 1	RESERVOIR ASSEMBLY	1		
30	10	35870	SCREW, RESERVOIR TO THEF	2		
31	36	55143	CAP, PRESSURE - HEAT EXCH	1		
32	32	61115	HOSE, OVERFLOW	1		
33	32	62206	HOSE, HEAT EXCHANGER TO I	1		
34	32	62205	HOSE, HEAT EXCHANGER TO I	1		
35		62711	STA-STRAP, RESERVOIR AND	1		
--		71587A 2	COOLANT RECOVERY KIT (SEE	1		