
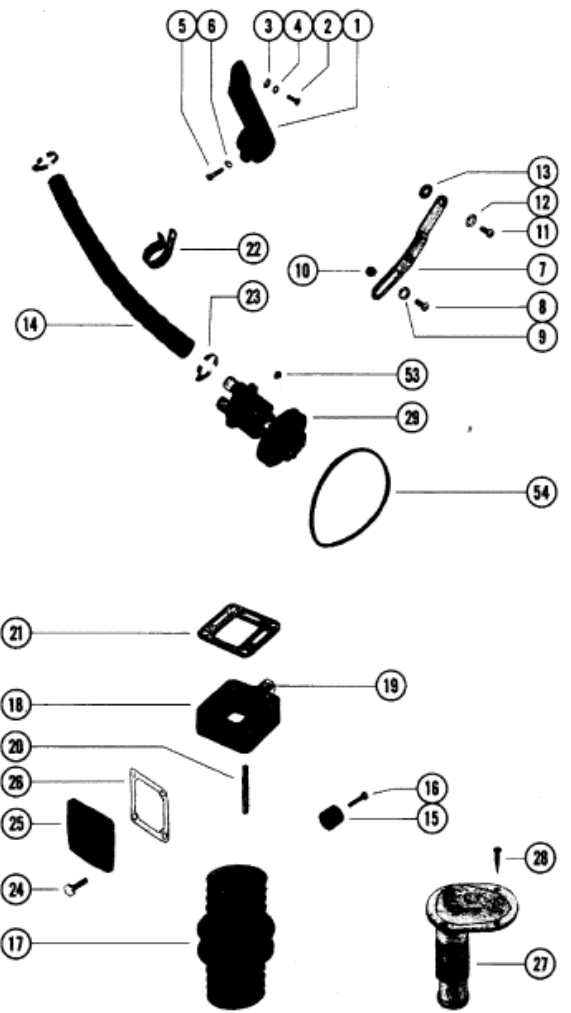


BREAKDOWN OF WATER PUMP

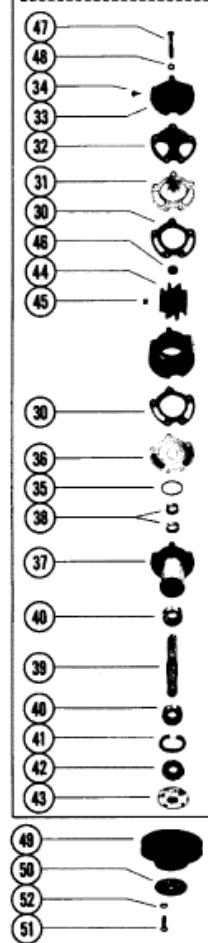

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		77518A	1 INSTALLATION KIT, FRESH WAT	1		
1		47488	BRACKET, WATER PUMP	1		
2	10	34353	SCREW, WATER PUMP BRAC	2		
3	12	20553	WASHER, WATER PUMP BRAC	1		
4	13	35048	LOCKWASHER, WATER PUMP	2		
5	10	34354	SCREW, CLAMPING - WATER F	1		
6	13	35048	LOCKWASHER, WATER PUMP	1		
7		71648	BRACE, WATER PUMP	1		
8	10	35786	SCREW, WATER PUMP BRACE	1		
9	13	37459	LOCKWASHER, WATER PUMP	1		
10	11	24883	NUT, WATER PUMP BRACE TC	1		
11	10	37612	SCREW, BRACE TO ENGINE (1	1		
12	13	35048	LOCKWASHER	1		
13	23	72057	SPACER	1		
14	32	49044	HOSE, WATER PUMP TO THEF	1		
15		32877	COVER, WATER STOP - GIMBA	1		
16	10	53556	SCREW, WATER STOP COVER	2		
17		72408	BELLOWS, EXHAUST ELBOW	2		
18		61937A	1 WATER DISTRIBUTION HOUSI	2		
19	23	52020	SLEEVE, WATER DISTRIBU	2		
20	16	52988	STUD, EXHAUST MANIFOLD TI	8		
21	27	52076	GASKET, EXHAUST MANIFOLD	4		
22	54	47715	CLIP, HOSE ATTACHING	1		
23	54	32780	CLAMP, HOSE TO WATER PUM	2		
24	10	25299	SCREW, END CAP ATTACHING	8		
25		73813A	1 END CAP, EXHAUST MANIFOL	2		
26	27	73814	GASKET, END CAP TO EXHAU	2		
27		68670A	2 THRU HULL WATER INTAKE A	1		
28	10	68864	SCREW, WATER INTAKE AT	4		
-	92	38927	1 LOCTITE, CAPSULE - WATER	1		
29	46	72774A	1 WATER PUMP ASSEMBLY	1		
30	27	72780	GASKET, WATER PUMP BOD	2		
31		72777	WEAR PLATE	1		
32	27	72779	GASKET, COVER TO OUTER	1		
33		72776	COVER, WATER PUMP	1		
34	10	28642	SCREW, WATER PUMP DRIV	4		
35	25	37340	"O" RING, PUMP HOUSING T	1		
36		72778	WEAR PLATE	1		
37	46	71497A	2 PUMP HOUSING	1		
38	26	23300	OIL &, WATER PUMP SHAFT	2		