



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-		45194A247	OUTBOARD POWER TRIM ASSE	1		3
-		45194A25	OUTBOARD POWER TRIM ASSE	.1		3
1		45060A 7	HYDRAULIC PUMP ASSEMBLY	1	SEE HYDRAULIC PUMP ASSEMI	
1		64461A 4	HYDRAULIC PUMP ASSEMBLY	.1	SEE HYDRAULIC PUMP ASSEMI	
2	25	21720	"O" RING, HYDRAULIC PUN I	4.4		
3	10	28634	SCREW, FILLER - HYDRAULIC	1.1		
4	12	20260	WASHER, SEALING - HYDRAI	1.1		
5	10	38257	SCREW, VENT - HYDRAULIC	1.1		
6	37	55901	DECAL, INSTRUCTION - HYDR	1.1		
7		32979	BATTERY LEAD (POSITIVE)	1.1		
8		32988	BATTERY LEAD (NEGATIVE)	1.1		
9		45336	PLATE, MANIFOLD	1.1		
10		45197A 2	CONTROL VALVE ASSEMBLY	1.1		
--	25	21720	"O" RING, HYDRAULIC PUMF	4.4	(SEE REFERENCE #2)	
11	25	45254	"O" RING, CONTROL VALVE	1.1		
12	25	21720	"O" RING, CONTROL VALVE	1.1		
13	25	45253	"O" RING, CONTROL VALVE	2.2		
14	10	56500	SCREW, CONTROL VALVE ANC	4.4	(1 1/4")	
15	13	26992	LOCKWASHER, CONTROL VAL	4.4		
16	22	38609	PLUG, CONTROL VALVE (3/8-2	2.2		
17	22	46008	PLUG, CONTROL VALVE (1/2-2)	2.2		
18		45325	CONNECTOR AND HARNESS	1.1		
19		45559	TERMINAL BLOCK, HYDRAULIC	1.1		
20	10	35519	SCREW, TERMINAL BLOCK TO	2.2		
21	10	62568	SCREW, HARNESS LEADS TO	2.2		
22		45377	BRACKET, MOUNTING - HYDR	2.2		
23	10	24234	SCREW, MOUNTING BRACKET	4.4		
24	13	39107	LOCKWASHER, MOUNTING BR	4.4		
25	11	21908	NUT, MOUNTING BRACKET SC	4.4		
26	10	28009	BOLT, HYDRAULIC PUMP TO B	2.2		
27	11	35304	NUT, HYDRAULIC PUMP BOLT	2.2		
28		25661	STARTER SOLENOID	1.1		
29	13	26996	LOCKWASHER, STARTER SOL	2.2		
30	11	68219	NUT, STARTER SOLENOID TEF	2.2		
31	13	26993	LOCKWASHER, STARTER SOL	2.2		
32	11	68292	NUT, STARTER SOLENOID TEF	2.2		
33		46265	BOOT, RUBBER - STARTER SO	2.2		
34		45321	BRACKET, MOUNTING - START	1.1		
35	10	21140	SCREW, MOUNTING BRACKET	2.2		
36	13	26992	LOCKWASHER, MOUNTING BR	2.2		