



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
-		76509A12	OUTBOARD POWER TRIM ASSE	1			
1		76395A 5	HYDRAULIC PUMP ASSEMBLY	1			
2	25	48171	"O" RING, HYDRAULIC PUMF	4			
3	10	79953	SCREW, FILLER - HYDRAULI	1			
4	12	20260	WASHER, SEALING - HYDRAI	1			
5	10	38257	SCREW, VENT - HYDRAULIC	1			
6	37	55901	DECAL, INSTRUCTION - HYDRA	1			
7		32979	BATTERY LEAD (POSITIVE)	1			
8		32988	BATTERY LEAD (NEGATIVE)	1			
9		45336	PLATE, MANIFOLD	1			
10		45197A 2	CONTROL VALVE ASSEMBLY	1			
--	25	48171	"O" RING, HYDRAULIC PUMF	4			
11	25	45254	"O" RING, CONTROL VALVE	1			
12	25	48171	"O" RING, CONTROL VALVE	1			
13	25	45253	"O" RING, CONTROL VALVE	2			
14	10	56500	SCREW, CONTROL VALVE ANC	4			
16	22	38609	PLUG, CONTROL VALVE (3/8-2	2			
17	22	46008	PLUG, CONTROL VALVE (1/2-2	2			
18	84	74023A 1	CONNECTOR AND HARNESS	1			
19		45559	TERMINAL BLOCK, HYDRAULIC	1			
20	10	48409	SCREW, TERMINAL BLOCK TO	2			
21	10	62568	SCREW, HARNESS LEADS TO	2			
22		45377	BRACKET, MOUNTING - HYDRA	2			
23	10	24234	SCREW, MOUNTING BRACKET	4			
24	13	39107	LOCKWASHER, MOUNTING BR	4			
25	11	21908	NUT, MOUNTING BRACKET SC	4			
26	10	68298	BOLT, HYDRAULIC PUMP TO B	2			
27	11	68411	NUT, HYDRAULIC PUMP BOLT	2			
28	89	68258	STARTER SOLENOID	1			
29	13	26996	LOCKWASHER, STARTER SOL	2			
30	11	68219	NUT, STARTER SOLENOID TEF	2			
31	13	26993	LOCKWASHER, STARTER SOL	2			
32	11	68292	NUT, STARTER SOLENOID TEF	2			
33		46265	BOOT, RUBBER - STARTER SO	2			
34		74407	BRACKET, MOUNTING - START	1			
35	10	21140	SCREW, MOUNTING BRACKET	2			
36	13	26992	LOCKWASHER, MOUNTING BR	2			
37	10	69052	SCREW, STARTER SOLENOID	2			
38	13	26992	LOCKWASHER, STARTER SOL	2			
39	11	21825	NUT, STARTER SOLENOID SCF	2			