



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
-		38548A	1 INSTRUMENT PANEL ASSEMBLY	1			
1		38548	PANEL, INSTRUMENT	1			
2	37	38543	DECAL, INSTRUMENT PANEL	1			
3	10	32866	SCREW, INSTRUMENT PANEL	4			
4	12	22887	WASHER, INSTRUMENT PANE	4			
5	11	20190	NUT, INSTRUMENT PANEL SC	4			
6		38545	SOCKET, OIL PRESSURE INDIC	1			
7		32879	LIGHT BULB, OIL PRESSURE IN	1			
8	23	37961	SLEEVE, OIL PRESSURE INDIC	1			
9		29759	SWITCH, CHOKE	1			
10	12	20628	WASHER, RUBBER- CHOKE SV	1			
11		31899	PLATE, RETAINER - CHOKE SW	1			
12	10	38792	SCREW, RETAINER PLATE TO	2			
13		32872	JUMPER WIRE, IGNITION SWIT	1			
14	10	24231	SCREW, JUMPER WIRE AND W	2			
15	11	20645	NUT, JUMPER WIRE AND WIRI	2			
16	23	32914	SLEEVE, JUMPER WIRE AND V	2			
17		38546	JUMPER WIRE, CHOKE SWITC	1			
18		52337	SWITCH, IGNITION (WITH KEY	1			
19	38	37338	PLATE, IGNITION SWITCH	1			
20		32861	BEZEL, IGNITION SWITCH TO I	1			
21		38544	SOCKET, WATER TEMPERATU	1			
22		32879	LIGHT BULB, WATER TEMPER.	1			
23	23	37961	SLEEVE, WATER TEMPERATU	1			
24		46435	TACHOMETER ASSEMBLY	1			
25	12	26014	WASHER, WIRING HARNESS C	2			
26	54	46997	"S" CLIP, WIRING HARNESS TI	2			
27	12	33110	WASHER, FIBER - TACHOMETE	2			
28	12	20878	WASHER, TACHOMETER TERM	2			
29	11	20645	NUT, TACHOMETER TERMINAL	2			
30		49917A	3 SOCKET ASSEMBLY, LIGHT BU	1			
31		32878	LIGHT BULB, TACHOMETER SC	1			
32		38549	WIRING HARNESS	1			
33	54	32780	CLAMP, WIRING HARNESS TO	1			
34	54	23567	CLAMP, WIRING HARNESS TO	4			
35		22789	"D" WASHER, WIRING HARNE	4			
36	10	33615	SCREW, WOOD - WIRING HAR	4			
37	10	20644	SCREW, WIRING HARNE SS CL	4			
38	11	20645	NUT, WIRING HARNESS CLAM	4			