



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		45129A	1 IGNITION COIL AND BALLAST AS	1		
1		26433	COIL, IGNITION	1		
2	13	26996	LOCKWASHER, IGNITION COIL	2		
3	11	20645	NUT, IGNITION COIL TERMINAL	2		
4		38912	HARNES, BALLAST	1		
5		33865	BINDER, BALLAST HARNES (	2		
6		38916	BINDER, BALLAST HARNES (	2		
7	13	26996	LOCKWASHER, BALLAST HARN	1		
8	11	20645	NUT, BALLAST HARNES TO S	1		
9	10	24231	SCREW, BALLAST HARNES T	1		
10	11	20645	NUT, BALLAST HARNES SCR	1		
11	23	32914	SLEEVE, BALLAST HARNES S	1		
12	393	1286	BALLAST	2		
13	10	24609	SCREW, WIRING HARNES LE	4		
14	13	26995	LOCKWASHER, WIRING HARN	4		
15	12	30191	WASHER, WIRING HARNES L	4		
16	10	21548	SCREW, BALLAST TO MOUNTI	1		
17	11	20184	NUT, BALLAST TO MOUNTING	1		
18		33210	JUMPER WIRE, BALLAST TO B.	1		
19		33211	BRACKET, MOUNTING - BALLA	1		
20	10	34613	SCREW, MOUNTING BRACKET	1		
21	10	21077	SCREW, MOUNTING BRACKET	1		
22	13	20758	LOCKWASHER, MOUNTING BR	1		