



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		45194A24	OUTBOARD POWER TRIM ASSE	1	3
-		45194A25	OUTBOARD POWER TRIM ASSE	.1	3
56		45194A18	SHOCK CYLINDER ASSEMBLY	2,2	SEE POWER TRIM CYLINDER R
57	10	45265	SCREW, BLEED - SHOCK CYL	4,4	
58	25	45016	"O" RING, SHOCK CYLINDER	4,4	
59	10	45264	SCREW, SHOCK CYLINDER TO	2,2	
60	23	45280	SPACER, SHOCK CYLINDER - L	2,2	
61	23	45281	BUSHING, RUBBER - SHOCK C	2,2	
62		66084	BRACKET, MOUNTING - SHOCK	1,1	
63	10	45263	SCREW, MOUNTING BRACKET	2,2	
64	10	28009	BOLT, MOUNTING BRACKET TI	4,4	
65	12	28008	WASHER, MOUNTING BRACKET	4,4	
66	11	35304	NUT, MOUNTING BRACKET BO	4,4	
67		45196A 2	BRACKET ASSEMBLY, MOUNTI	1,1	
68	26	70608	OIL SEAL, STARBOARD MOU	1,1	
69		45286	PLUNGER, LIMIT SWITCH ACTI	1,1	
70	24	45272	SPRING, TENSION - LIMIT SWI	1,1	
71	16	45282	STUD, MOUNTING BRACKET A	1,1	
72	13	26993	LOCKWASHER, MOUNTING BR	2,2	
73	11	20083	NUT, MOUNTING BRACKET TO	2,2	
74	10	45328	SCREW, SHOCK CYLINDER TO	2,2	
75	12	37807	WASHER, SHOCK CYLINDER S	1,1	
76	11	20696	NUT, SHOCK CYLINDER SCREW	2,2	
77	24	24390	SPRING, TENSION - ADJUSTIN	1,1	
78	16	21085	STUD, ADJUSTING - CUT-OUT	1,1	
79	11	45812	NUT, JAM - LIMIT SWITCH ADJI	1,1	
80		45508	CAM, LIMIT SWITCH ADJUSTIN	1,1	
81		45509	PLATE, RETAINING - LIMIT SW	1,1	
82	10	68513	SCREW, RETAINING PLATE AK	1,1	
83	13	26996	LOCKWASHER, RETAINING PL	1,1	
84		45326A 2	SWITCH ASSEMBLY, CUT -OUT	1,1	
85	23	45354	BUSHING, RUBBER - CUT -OU	1,1	
86	10	47255	SCREW, CUT-OUT LIMIT SWIT	2,2	
87		45287	COVER, LIMIT SWITCH	1,1	
88	27	45275	GASKET, LIMIT SWITCH COVER	1,1	
89	10	24942	SCREW, LIMIT SWITCH COVER	5,5	
90		45289	COVER, INLET - TRANSOM	1,1	
91	27	45274	GASKET, INLET COVER	1,1	
92	25	45507	GROMMET, RUBBER - INLET C	1,1	
93	10	32866	SCREW, INLET COVER TO BOA	4,4	