



1732

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		827270A 1	REMOTE CONTROL	1	(Non Trim)	10
-		827270A 2	REMOTE CONTROL	1	(Outboard)	10
-		827270A 3	REMOTE CONTROL	1	(Mercruiser)	10
-		827270A 5	REMOTE CONTROL	1	(Bayliner Non Trim)	10
-		827270A 6	REMOTE CONTROL	1	(Bayliner Outboard)	10
-		827270A 7	REMOTE CONTROL	1	(Bayliner Mercruiser)	10
-		827270A 8	REMOTE CONTROL	1	(Sea Ray Outboard)	10
-		827270A 9	REMOTE CONTROL	1	(Sea Ray Mercruiser)	10
-		827270A10	REMOTE CONTROL	1	(Wellcraft Outboard)	10
-		827270A11	REMOTE CONTROL	1	(Wellcraft Mercruiser)	10
1		817257	GRIP	1	(Non Trim and Outboard)	
2		817258	GRIP	1	(Mercruiser)	
3	87	18286A31	SWITCH ASSEMBLY, Trim/Traile	1	(Outboard)	
3	87	18286A32	SWITCH ASSEMBLY, Trim/Traile	1	(Bayliner Outboard)	
4	87	18286A33	SWITCH ASSEMBLY, Trim/Traile	1	(Mercruiser)	
5	24	16924	SPRING	1		
6		822212	BUTTON, Throttle Only	1		
7	10	822213	BOLT, Locking, Special	1		
8		822211T	HANDLE, Control, Black	1		
9	10	58376	SCREW, (.164-18 x .375)	1		
10		817259	RELEASE, Shift	1		
11	12	28001	WASHER, (.188 x .438 x .049)	1		
12	10	40056	SCREW, (M4 x 10)	1		
13	37	827289	DECAL, Bezel	1	(Starboard)	
13	37	827289	DECAL, Bezel	1	(Port)	
14	23	822980	BUSHING, Firm	1	(White) (Design I)	
14	23	822980	BUSHING, Firm	1	(Black) (Design II)	
15	23	822980	BUSHING, Flex	1	(Black) (Design III)	
16	87	13398	SWITCH, Stop	1	(Mercruiser)	
16	87	13398	SWITCH, Stop	1	(Outboard)	
17	10	19923088	SCREW, (.250-20 x .875)	3		
18		822216T	BEZEL	1	(Black) (Design I)	
18		881173T	BEZEL	1	(Black) (Design II)	
19		12044	RETAINER	1		
20	12	69057	WASHER, (.281 x .734 x .063)	3		
21	11	814101	NUT, (.250-20)	3		
22	10	822981	SET SCREW, (.250-20 x .187), F	1		
23	10	822214	SCREW, (.250-20 x 1.750)	3		
24		15920A54	LANYARD ASSEMBLY	1		
25	10	858609	SCREW, Wood (.250 x 1.250)	OPT		