



15577

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		88150A27	REMOTE CONTROL	1	(Outboard)	15
-		88150A28	REMOTE CONTROL	1	(Mercruiser)	15
-		88150A29	REMOTE CONTROL	1	(Non Trim)	15
-		88150A30	REMOTE CONTROL	1	(Bayliner Outboard)	15
-		88150A31	REMOTE CONTROL	1	(Bayliner Mercruiser)	15
-		88150A32	REMOTE CONTROL	1	(Bayliner Non Trim)	15
1		818513T	BEZEL	1		
2	10	96954	SCREW, (.250-20 x 1.375)	4		
3	10	88058	SCREW, (.250-28 x 1.250)	2		
4	10	68497	SCREW, (.250-28 x 1.750)	2		
5	12	69057	WASHER, (.281 x .734 x .063)	2		
6	11	20361	NUT, (.250-28)	2		
7		817256 1	LOCK RING	1		
8	37	817696 1	DECAL	1		
9	37	817715	DECAL, Port	1		
10	84	817659A 1	HARNESSE ASSEMBLY, Trim - 1E	1	(Mercruiser)	
11	54	816311T	CABLE TIE, (8.00 Inches)	1		
12	87	817724A 2	SWITCH ASSEMBLY, Neutral St.	1		
13	87	817724	SWITCH, Micro	1	(Bayliner)	
14		817250T	HANDLE, Control	1		
15		823602	RETAINER	1	(Outboard and Mercruiser)	
16	10	817719	SET SCREW, (M8 x 6)	1		
17		817259	RELEASE, Shift	1		
18	24	16924	SPRING	1		
19		817257	GRIP	1	(Non Trim and Outboard)	
19		817258 1	GRIP	1	(Mercruiser)	
20	10	40056 85	SCREW, (M4 x 10)	2		
21	12	28001	WASHER, (.188 x .438 x .049)	1		
22	87	18286A31	SWITCH ASSEMBLY, Trim/Traile	1	(Outboard)	
22	87	18286A32	SWITCH ASSEMBLY, Trim/Traile	1	(Bayliner Outboard)	
22	87	18286A33	SWITCH ASSEMBLY, Trim/Traile	1	(Mercruiser)	
23		817697	PLUG, Stop Switch Hole	1	(Non Trim)	
24		817254	BUTTON	1		
25	37	817695	DECAL	1		