



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		34744A	1 REMOTE CONTROL ASSEMBLY (1,		
-		45958A	2 REMOTE CONTROL ASSEMBLY (1,		
-		45958A	5 REMOTE CONTROL ASSEMBLY (1,1		
1		34669	HOUSING, REMOTE CONTROL	1,		
1		45880	HOUSING, REMOTE CONTROL	1,		
1		45880	2 HOUSING, REMOTE CONTROL	1,		
2	24	34683	SPRING, DETENT - CONTROL	1,1		
3		34992	ROLLER, DETENT SPRING	1,1		
4		34671	LEVER, THROTTLE - CONTROL	1,1		
5	10	34676	SCREW, THROTTLE LEVER TC	1,1		
6	12	34675	WASHER, THROTTLE LEVER	1,1		
7		34672	CAM ROLLER, THROTTLE LEV	1,1		
8	17	34673	PIN, CAM ROLLER TO THROTT	1,1		
9	12	34680	WASHER, CAM ROLLER PIN	1,1		
10	11	31953	NUT, CAM ROLLER TO THROT	1,1		
11		34679	PLATE, THRUST - CONTROL H	1,1		
12	10	29762	SCREW, THRUST PLATE TO N	3,		
12	10	47220	SCREW, THRUST PLATE TO N	3,3		
13	17	20009	PIN, DETENT - CONTROL HOU	1,1		
14	24	35210	SPRING, DETENT PIN	1,1		
15	24	35227	SPRING, DETENT PIN TENSIO	1,1		
16	19	20011	WELCH PLUG, DETENT PIN AN	1,1		
17		34670	LEVER, NEUTRAL WARM-UP -	1,		
17		34670	2 LEVER, NEUTRAL WARM-UP -	1,		
18	37	31021	TAPE, NEUTRAL WARM-UP LE	1,1		
19	13	34678	WASHER, WAVE - NEUTRAL W	1,1		
20	23	33589	BUSHING, NYLON - NEUTRAL	1,1		
21	17	34692	PIN, SHIFT AND THROTTLE LE	2,2		
22	18	29623	COTTER PIN, SHIFT AND THRC	2,2		
23		54911	FACE CAM	1,1		
24	23	34677	BUSHING, NYLON- FACE CAM	2,2		
25		34621A	1 SWITCH AND CABLE ASSEMBL	1,1		
26	23	34947	SLEEVE, SAFETY SWITCH LE	1,1		
27	54	20386	CLAMP, SAFETY SWITCH LEA	1,1		
28	10	30902	SCREW, SAFETY SWITCH TO C	2,2		
29	54	26550	CLIP, SAFETY SWITCH LEADS	1,1		
30	10	37260	SCREW, SAFETY SWITCH LEA	1,1		
31		22789	"D" WASHER, SAFETY SWITCH	1,1		
32		34681	HOUSING, REMOTE CONTROL	1,		
32		45939	HOUSING, REMOTE CONTROL	1,		