



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		32399A 1	RIDE-GUIDE STEERING KIT, WH	1,1		
-		32399A 2	RIDE-GUIDE STEERING KIT, BLA	1,1		
-		32400A 1	RIDE-GUIDE STEERING KIT, WH	1,1		
-		32400A 2	RIDE-GUIDE STEERING KIT, BLA	1,1		
3	10	29223	BOLT, STEERING WHEEL TO C	1,1		
3	10	29400	BOLT, STEERING WHEEL TO C	1,1		
4	23	29097	BUSHING,STEERING WHEEL B	2,2,2		
5		31446 1	BRACKET,STEERING WHEEL N	1,1	WHITE	
5		31446 2	BRACKET,STEERING WHEEL N	1,1	BLACK	
5A		31442 1	BRACKET,STEERING WHEEL N	1,1	WHITE	
5A		31442 2	BRACKET,STEERING WHEEL N	1,1	BLACK	
6	37	32710	DECAL, OVERLAY TRIM STRIP	1,1,1		
7		29220	SHAFT, STEERING WHEEL (20	1,1		
7		25890	SHAFT, STEERING WHEEL (90	1,1		
8	12	25897	WASHER, SHAFT TO GEAR RA	1,1,1,1		
9	23	25901	BUSHING, GEAR RACK HOUSI	2,2,2,2		
10		25884	HOUSING, GEAR RACK	2,2,2,2		
11		25887	RACK, GEAR	1,1,1,1		
12		25895A 1	TUBE ASSEMBLY, GEAR RACK	1,1,1,1		
13		25896	TUBE, GEAR RACK (OPEN EN	1,1,1,1		
14		26059	C&P, RUBBER - GEAR RACK TU	1,1,1,1		
15		25898	PINION, GEAR RACK	1,1,1,1		
16	10	20784	SCREW, GEAR RACK HOUSING	6,6,6,6		
17	10	24217	SCREW, GEAR RACK HOUSING	1,1,1,1		
18	11	46887	NUT, GEAR RACK HOUSING CL	6,6,6,6		
19	11	49197	NUT, GEAR RACK HOUSING CL	1,1,1,1		
20	12	27966	WASHER, LOWER - STEERING	1,1,1,1		
21	11	23161	NUT, STEERING WHEEL TO H	1,1,1,1		
22		29215	BRACKET, GEAR RACK HOUSI	1,1		
22A		29398	BRACKET, GEAR RACK HOUSI	1,1		
23	10	29222	SCREW, BRACKET TO GEAR R	1,1,1,1		
24	23	29210	SPACER, BRACKET TO GEAR F	1,1		
24	23	29397	SPACER, BRACKET TO GEAR F	1,1		
25	12	25909	WASHER, BRACKET TO GEAR	1,1,1,1		
26	11	20509	NUT, BRACKET TO GEAR RAC	1,1,1,1		
27	10	22040	SCREW, STEERING BRACKET	2,2		
27	10	20705	SCREW, STEERING BRACKET	2,2		
28	23	29209	SPACER, STEERING BRACKET	2,2,2,2		
29	12	20959	WASHER, STEERING BRACKET	2,2,2,2		
30	11	21612	NUT, STEERING BRACKET SPA	2,2,2,2		