



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		36065A 2	FULL POWER TILT (USE WITH M	1,		
-		36065A 4	FULL POWER TILT (USE WITH LI	1,		
-		36065A 3	FULL POWER TILT (USE WITH 1	1,		
50		35978	PANEL, CONTROL	1,1,1		
51	10	32866	SCREW, CONTROL PANEL TO	2,2,2		
52	12	33110	WASHER, FIBER - CONTROL P	2,2,2		
53	11	20190	NUT, CONTROL PANEL SCREW	2,2,2		
54	23	36273	SPACER, IGNITION SWITCH	1,1,1		
55		30162	SWITCH, IGNITION - CONTROL	1,1,1		
56		35019	JUMPER WIRE, IGNITION SWI	1,1,1		
57		34959	SWITCH, ROCKER - CONTROL	1,1,1		
58	10	32989	SCREW, ROCKER SWITCH TO	2,2,2		
59		32861	BEZEL, IGNITION SWITCH TO	1,1,1		
60	37	35408	DECAL, CONTROL PANEL - INS	1,1,1		
61	37	36035	DECAL, CONTROL PANEL - "FU	1,1,1		
62		35395	HARNES, CONTROL	1,1,1		
63	54	22875	CLAMP, CONTROL HARNES	3,3,3		
64		22789	"D" WASHER, CONTROL HARN	3,3,3		
65	12	20878	WASHER, CONTROL HARNES	3,3,3		
66	10	33615	SCREW, WOOD - CONTROL HA	3,3,3		
67	10	20644	SCREW, CONTROL HARNES	3,3,3		
68	11	20645	NUT, CONTROL HARNES CLA	3,3,3		
69		35409	HARNES, INSTRUMENT PANE	1,1,1		
70		35396	JUMPER WIRE, TERMINAL BLC	1,1,1		
71		35009	TERMINAL BLOCK, TRANSOM	1,1,1		
72	10	28739	SCREW, HARNES LEADS TO	10,10,1		
73	10	33615	SCREW, WOOD - TERMINAL BI	4,4,4		
74		36142	BLOCK, HOSE - GIMBAL HOUSI	1,		
75	22	35268	PLUG, PIPE - HOSE BLOCK	1,		
76	10	36137	SCREW, HOSE BLOCK TO GIMI	2,		
77	11	35888	NUT, HOSE BLOCK SCREW	2,		
78	32	36168	HOSE, CONNECTING - VALVE A	1,		
79	23	35977	GROMMET, LIFT HOSE	2,2,		
79	23	36175	GROMMET, CONNECTING HOS	1,		
80		36081	COVER, INLET- TRANSOM	2,2,		
80		36135	COVER, INLET- TRANSOM	1,		
81	27	36079	GASKET, INLET COVER	2,2,		
81	27	36079	GASKET, INLET COVER	1,		
82	10	33684	SCREW, INLET COVER TO TRA	4,4,		
82	10	33684	SCREW, INLET COVER TO TRA	2,		