



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-		46769A	1 CONVERSION ASSEMBLY, COMF	1		
1		45060A	7 HYDRAULIC PUMP ASSEMBLY	1		
2	25	26834	"O" RING, HYDRAULIC PUMF	4		
3	10	28634	SCREW, FILLER - HYDRAULI	1		
4	12	20260	WASHER, SEALING - HYDRAI	1		
5	10	46918	SCREW, VENT - HYDRAULIC	1		
6	13	46917	LOCKWASHER, VENT SCREW	1		
7	54	37282	CLAMP, HYDRAULIC PUMP HA	1		
8		37281	"D" WASHER, HYDRAULIC PUF	1		
9	38	45372	DECAL, INSTRUCTION - HYDR	1		
10		32979	BATTERY LEAD (POSITIVE)	1		
11		32988	BATTERY LEAD (NEGATIVE)	1		
12		45382A	1 CONTROL VALVE ASSEMBLY	1		
--	25	26834	"O" RING, HYDRAULIC PUMF	4		
13	22	38609	PLUG, CONTROL VALVE (3/8-2	1		
14	10	21091	SCREW, CONTROL VALVE TO I	4		
15	13	26992	LOCKWASHER, CONTROL VAL	4		
16		45325	CONNECTOR AND HARNESS	1		
17		45559	TERMINAL BLOCK, HYDRAULIC	1		
18	10	28192	SCREW, TERMINAL BLOCK TO	2		
19	10	30663	SCREW, HARNESS LEADS TO	2		
20		46166	BRACKET, MOUNTING - HYDR	1		
21	10	35263	BOLT, HYDRAULIC PUMP BRAC	3		
22	11	35304	NUT, HYDRAULIC PUMP BOLT	3		
23	10	21962	SCREW, MOUNTING BRACKET	3		
24	12	20546	WASHER, MOUNTING BRACKE	3		
25	11	21528	NUT, MOUNTING BRACKET SC	3		
--	23	46047	SPACER, HYDRAULIC PUMP SI	3		
26		25661	STARTER SOLENOID	1		
27	13	26996	LOCKWASHER, STARTER SOL	2		
28	11	20645	NUT, STARTER SOLENOID TEF	2		
29	13	26993	LOCKWASHER, STARTER SOL	2		
30	11	20083	NUT, STARTER SOLENOID TEF	2		
31		46265	BOOT, RUBBER - STARTER SO	2		
32		45321	BRACKET, MOUNTING- START	1		
33	10	21140	SCREW, MOUNTING BRACKET	2		
34	13	26992	LOCKWASHER, MOUNTING BR	2		
35	10	34290	SCREW, STARTER SOLENOID	2		
36	13	26992	LOCKWASHER, STARTER SOL	2		
37	11	21825	NUT, STARTER SOLENOID SCF	2		