



2503

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
0	1626	2550A 3	GEAR HOUSING-COMPLETE	1		
1	1626	2550A 1	GEAR HOUSING (BASIC)	1		
2	16	36196	STUD-Gear Housing to Water &	3		
3	16	29078	STUD-Gear Housing to Drive S	2		
4	31	20231	ROLLER BEARING-Drive Shaft	1		
5	45	38125A 2	DRIVE SHAFT ASSEMBLY	1		
6	24	20254	SPRING-Drive Shaft	1		
7	17	30545	PIN-Drive Shaft	1		
8	43	38126	PINION GEAR	1		
9	11	30932	NUT-Pinion Gear to Drive Shaft	1		
10	10	28634	SCREW-Gear Housing Grease Fil	1		
11	12	20260	WASHER-Rubber-Grease Filler &	1		
12		32008	LOWER SHIFT SHAFT	1		
13	18	20233	RETAINING CLIP-Shift Shaft	1		
14	25	25439	O RING-Shift Shaft Bushing	1		
15	23	38993A 2	SHIFT SHAFT BUSHING ASSEMB	1		
16	26	31249	OIL SEAL-Shift Shaft Bushing	1		
17	12	31266	WASHER-Shift Shaft Bushing	1		
18	12	29395	WASHER-Shift Shaft	1		
19	15	20929A 1	SHIM SET-Drive Shaft Bearing C	AR		
20	31	38146A 1	TAPERED ROLLER BEARING A	1		
21		NSS	CUP	1		
22	25	26855	O RING-Water & Oil Adaptor (LAF	1		
23	27	38115	GASKET-Water & Oil Adaptor	1		
24		38131a 1	ADAPTOR ASSEMBLY-Water & I	1		
25	12	36446	WASHER-Nylon-Water & Oil Ac	1		
26	26	36557	SEAL-Rubber-Water Inlet Tube	1		
27	23	29804	SLEEVE-Guide-Water Inlet Tub	1		
28	25	23145	O RING-Water and Oil Adaptor	1		
29	11	30506	NUT-Water & Oil Adaptor to Gear	3		