



2501

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		38161A 2	GIMBAL RING ASSEMBLY	1		
2	23	38198	BUSHING (Lower)	1		
3	12	38268	WASHER	2		
4	23	38267	BUSHING-Hinge Pin	2		
5	17	38266	HINGE PIN-Gimbal Ring to Bell Hou	2		
6	10	33022	SCREW-Upper Swivel Shaft Retair	1		
7	12	20546	WASHER-Upper Swivel Shaft Retz	1		
8	12	32518	WASHER-Gimbal Housing to Gimbi	1		
9	17	38199	SWIVEL PIN-Gimbal Housing to Gir	1		
10	18	34159	COTTER PIN-Retaining-Lower Swir	1		
11	17	38269	TILT PIN-Gimbal Ring	1		
12	11	35814	NUT-Gimbal Ring Tilt Pin	2		
13		32582	UPPER SWIVEL SHAFT-Gimbal Ri	1		
14	22	32561	PIPE PLUG-Upper Swivel Shaft	1		
15	12	32996	WASHER-Upper Swivel Shaft	AR	(.015)	
15	12	32997	WASHER-Upper Swivel Shaft	AR	(.063)	
16		38174	STEERING LEVER-Upper Swivel E	1		
17	10	32995	SCREW -Steering Lever to Upper E	1		
18	11	20696	NUT-Steering Lever Screw	1		
19		38192	YOKE-Steering Link Rod	1		
20	17	38864A 1	SwIVEL PIN ASSEMBLY-Yoke to :	1		
21	12	29629	WASHER	1		
22	18	29623	COTTER PIN	1	(S/N-1887256 & Up)	
22	18	38336	COTTER PIN	1	(S/N-1887255 & Below)	
23	11	20101	JAM NUT-Steering Link Rod	1		
24		38187A 1	STEERING LINK ROD ASSEMBLY	1		
25	12	20086	WASHER-Steering Link Rod	1		
26	11	20509	NUT-Steering Link Rod to Steering	1		
27		38886	BUMPER-Gimbal Ring	1		
28		31897	LEVER-Tilt Stop Switch Actuating-(1		
29	10	31903	SCREW-Actuating Lever and Bump	2		
30		38296A 1	TILT STOP SWITCH ASSEMBLY-(1		
31		22924	TERMIANL-Tilt Stop Switch	2		
32	23	31902	SPACER-Tilt Stop Switch to Retain	1		
33		31899	RETAINING PLATE-Tilt Stop Switc	1		
34		32637	STRAP-Tilt Stop Switch Retaining	1		
35	10	22387	SCREW-Retaining Plate & Strap to	2		
36	11	20110	NUT-Retaining Plate & Strap Screw	2		
37		38179A 2	SENDER HOUSING ASSEMBLY	1		
38		38211	ROD END- Sender Housing Pistor	1		
39	10	38257	WENT SCREW- Sender Housing	1		