



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		33266	DISTRIBUTOR ASSEMBLY, COM	1			
2		33668	HOUSING, PRIMARY - DISTRIB	1			
3	43	33664	GEAR, DRIVE - MAIN SHAFT	1			
4		33669	MAIN SHAFT AND WEIGHT PL	1			
5	17	33649	PIN, DRIVE GEAR TO MAIN SH	1			
6		33661	CAM, BREAKER - ADVANCE	1			
-		33653	FELT, BREAKER CAM LUBRICA	1			
-		33670	RETAINER, BREAKER CAM LUB	1			
7		33651	WEIGHT, BREAKER CAM ADVA	2			
8	24	33652	SPRING, BREAKER CAM ADVA	2			
9		33655	PLATE, WEIGHT HOLD DOWN	1			
10	10	33656	SCREW, WEIGHT HOLD DOWN	2			
11		33665	PLATE, MOUNTING - BREAKER	1			
12	10	33648	SCREW, MOUNTING PLATE TC	2			
13		33662	CONDENSER	1			
14		34235	BREAKER ASSEMBLY, DISTRIB	1			
15	10	33650	SCREW, BREAKER ASSEMBLY	1			
16	25	33666	GROMMET, MOUNTING PLAT	1			
17		33658	LEAD, PRIMARY	1			
18		33659	ROTOR, DISTRIBUTOR	1			
19	12	36275	WASHER, ROTOR	1			
20		33667	CAP, DISTRIBUTOR	1			
21		33654	BUTTON, CARBON - DISTRIB	1			
22	10	33660	SCREW, DISTRIBUTOR CAP TC	1			
23	10	33663	SCREW, DISTRIBUTOR CAP TC	1			
24	27	34486	GASKET, DISTRIBUTOR	1			
25		32762A 1	LEAD ASSEMBLY, HIGH TENSIO	2			
26		32762A 2	LEAD ASSEMBLY, HIGH TENSIO	2			
27		20119A 1	PROTECTOR, HIGH TENSION L	4			
-	393	1275	SLEVE, TERMINAL END COVEF	4			
28	33	37405	SPARK PLUG (AC#C44N)	4			
29		32782	RETAINER, HIGH TENSION LEAC	1			
30		32763A 1	WIRE ASSEMBLY, DISTRIBUTOF	1			
31		32704	COIL ASSEMBLY, IGNITION USE	1	SERIAL 00000000-01949901		
32		33321	BRACKET, IGNITION COIL MOUN	1	SERIAL 00000000-01949901		
33	10	33311	SCREW, MOUNTING BRACKET	1	SERIAL 00000000-01949901		
34	54	33271	CLAMP, LOCK - IGNITION COIL	2	SERIAL 00000000-01949901		
35	11	33277	NUT, IGITION COIL TERMINAL	2	SERIAL 00000000-01949901		
31		26433	COIL, IGNITION STARTED WITH	1	SERIAL 01949902-09999999		
32		33321	BRACKET, IGNITION COIL MOUN	1	SERIAL 01949902-09999999		
33	10	33311	SCREW, MOUNTING BRACKET	1	SERIAL 01949902-09999999		