



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		55898A 3	FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 03377341-03461707	
1		65059A 1	FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 03461708-09999999	
2	23	46742	SPACER, FLYWHEEL HOUSING	2		
3		35864	COVER PLATE, FLYWHEEL HO	1		
4	10	47277	SCREW, COVER PLATE TO CYL	5		
4	10	20844	SCREW, COVER PLATE TO CYL	1		
5	11	46793	NUT COVER PLATEN SCREW	6		
6	54	72531	EYE, LIFTING - FLYWHEEL HO	1		
7	10	26632	SCREW, FLYWHEEL HOUSING T	5		
8	10	34613	SCREW, FLYWHEEL HOUSING T	1		
9	13	37459	LOCKWASHER, FLYWHEEL HO	6		
10	11	28517	NUT, FLYWHEEL HOUSING SC	1		
11	54	24871	CLAMP, WIRING HARNESS TO FI	1	SERIAL 03377341-03461707	
12	10	22028	SCREW, WIRING HARNESS CLAI	1	SERIAL 03377341-03461707	
13	13	26396	LOCKWASHER, WIRING HARNE	1	SERIAL 03377341-03461707	
14		22789	"C" WASHER, WIRING HARNE	1	SERIAL 03377341-03461707	
15	54	61001	CLIP, WIRING HARNESS TO FLY	1	SERIAL 03461708-09999999	
16	10	20844	SCREW, WIRING HARNESS CLIF	1	SERIAL 03461708-09999999	
17		39974	CONNECTOR, HARNESS LEADS	2	SERIAL 03461708-03770649	
18	10	37892	SCREW, CONNECTOR TO FLYWI	2	SERIAL 03461708-03770649	
17		39974	CONNECTOR, HARNESS LEADS	2	SERIAL 03377341-03461707	
18	10	47618	SCREW, CONNECTOR TO FLYWI	4	SERIAL 03377341-03461707	
19		32832	MOUNT FLYWHEEL HOUSING (	1		
19		33149	MOUNT, FLYWHEEL HOUSING (F	1		
20	54	34764	EYE, LIFTING - CYLINDER BLOC	1	SERIAL 03377341-03461707	
21	10	21077	SCREW, LIFTING EYE TO CYLIN	1	SERIAL 03377341-03461707	
22	13	37459	LOCKWASHER, LIFTING EYE SC	1	SERIAL 03377341-03461707	
23		67850	BRACKET, LIFTING EYE	1	SERIAL 03461708-09999999	
24	10	54528	SCREW, LIFTING EYE BRACKET	2	SERIAL 03461708-09999999	
25	13	35364	LOCKWASHER, LIFTING EYE BR	2	SERIAL 03461708-09999999	
26	38	31042	SERIAL PLATE	1		
27	10	28642	SCREW, DRIVE - SERIAL PLATE	2		
28		36099A 2	BRACKET ASSEMBLY, FRONT MI	1	SERIAL 00000000-04469865	
28		73571A 2	BRACKET ASSEMBLY, FRONT MI	1	SERIAL 04469866-09999999	
29	23	35903	SPACE, FRONT MOUNTING BR	1		
30		32833	MOUNT, FRONT MOUNTING BR	1		
31		35862	BLOCK, SPACER - FRONT MOUN	1		
32	10	32557	SCREW, BRACKET AND SPACER	2		
33	13	32993	LOCKWASHER, BRACKET AND SI	2		
34	12	22248	WASHER, BRACKET AND SPA	2		
35	10	26482	SCREW, FRONT MOUNTING BR	2		