



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	424	2422	CAMSHAFT	1		
2	28	34466	KEY, CAMSHAFT GEAR	1		
3	23	34469	BEARING, CAAMSHAFT THRUST	1		
4	43	58283	GEAR, TIMING	1		
5	10	21417A 1	SCREW, TIMING GEAR TO CAMS	2		
6		46744	LIFTER, HYDRAULIC - TAPPET	8		
7		65142	WATER PUMP ASSEMBLY (SPEC	1	SERIAL 03377341-03506318	
7		52353	WATER PUMP ASSEMBLY (SPEC	1	SERIAL 03506319-09999999	
8	27	33956	GASKET, WATER PUMP	1		
9	10	34471	SCREW, WATER PUMP TO CYLIN	2		
10	10	34505	SCREW, WATER PUMP TO CYLIN	2		
11		52349	PULLEY, WATER PUMP	1		
12	10	47277	SCREW, PULLEY AND HUB TO W	4		
13	13	39107	LOCKWASHER, PULLEY AND HU	4		
14	32	46471	NOZZLE, OIL - TIMING GEAR	1		
15	57	64032	BELT, ALTERNATOR	1		
16	613	2277	CONNECTING ROD ASSEMBLY	4		
17	10	34473	BOLT, CONNECTING ROD BEA	8	SERIAL 00000000-04509005	
17	10	75539	BOLT, CONNECTING ROD BEA	8	SERIAL 04509006-09999999	
18	11	58099	NUT, CONNECTING ROD CAP E	8		
19	23	52242	BEARING (PAIR), CONNECTING F	4	SERIAL 03377341-03506318	
19	23	52243	BEARING (PAIR), CONNECTING F	AR	SERIAL 03377341-03506318	
19	23	52244	BEARING (PAIR), CONNECTING F	AR	SERIAL 03377341-03506318	
19	23	52245	BEARING (PAIR), CONNECTING F	AR	SERIAL 03377341-03506318	
19	23	52246	BEARING (PAIR), CONNECTING F	AR	SERIAL 03377341-03506318	
19	23	48351	BEARING (PAIR), CONNECTING F	4	SERIAL 03506319-09999999	
19	23	48353	BEARING (PAIR), CONNECTING F	AR	SERIAL 03506319-09999999	
19	23	52245	BEARING (PAIR), CONNECTING F	AR	SERIAL 03506319-09999999	
19	23	52246	BEARING (PAIR), CONNECTING F	AR	SERIAL 03506319-09999999	
20	423	2275	CRANKSHAFT	1		
21	23	34466	KEY, PULLEY AND GEAR LOCATI	2		
22	43	46743	GEAR, CRANKSHAFT	1		
23		34220	HUB, PULLEY - CRANKSHAFT	1		
24		35602	PULLEY, CRANKSHAFT	1		
25	10	35340	SCREW, PULLEY TO CRANKSHA	1		
25	10	34276	SCREW, PULLEY TO CRANKSHA	2		
26	220	2282	FLYWHEEL, CRANKSHAFT	1		
27	16	32808	FLYWHEEL TO ENGINE COUPLIN	6		
28		38965A 2	ENGINE COUPLING ASSEMBLY	1		
29	12	35335	WASHER, FLYWHEEL STUD	6		
30	11	24922	NUT, FLYWHEEL STUD	6		